




COWAY LOVES THE PLANET
This paper can be recycled.

Coway

Coway Self-Sterilising Bidet BAS25-ATH

- This product is designed for use in Thailand.
- This product can not be used if the voltage is different from that mentioned in the rating plate.
- Please read this user manual before using this product for your safety and proper usage of it.

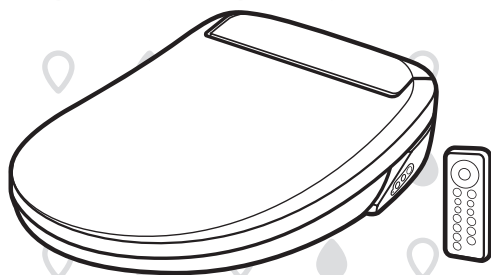

FEATURES

1

Slim and elegant design resembles a fully integrated bidet toilet


- For space efficiency, there is no control panel on the product; this bidet is being controlled remotely. The back of the product is curvy and sleek instead of the conventional square and rigid design. The fineness and elegance of the bidet design allows it to match well with any porcelain toilet.



2

Safe rear cleansing with sterile water


- Hygienic cleansing is enhanced with a 2-second cleansing process with sterile water, which is electrolysed without using chemicals.

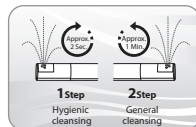

3

Customised WIDE function

- The WIDE function allows gentle cleansing on a wider area. Press the WIDE button to select the degree of water dispersion: Basic linear stream (LED is off) → Wide (WIDE 1, LED is green) → Widest (WIDE 2, LED is red). Pressing the WIDE button on the bidet allows circular spraying of water which is suitable for female body structure, giving extra comfort for delicate areas.

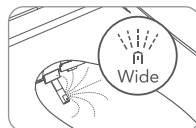

4

Child cleansing/Air+ function


- Child function is specially designed for children as their skin is more sensitive than adults. With one button, you can select the setting suitable for children, such as low water pressure, warm temperature, WIDE 1 stream and the position of the nozzle considering the size of the user/child. The Child mode operates for 1 minute of cleansing and 2 minutes for drying.
- Air+ function adds air to the water spray to increase its cleansing ability. A more powerful and efficient cleansing can be achieved with Air+.



5

Daily automated sterilisation system (Nozzle, hose)


- The Hose Sterilisation function sterilises all water passage paths inside the bidet, and the Nozzle Sterilisation function sterilises nozzle on a regular basis to guarantee hygiene.

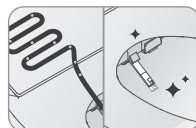

6

Separated structure of the stainless nozzle and nozzle/drying duct

- The nozzle and the drying duct which are most vulnerable to contamination can be separated for easy cleaning.

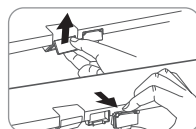

7

High quality RF remote control


- Reception and user convenience has been enhanced with the wireless radio frequency (RF) remote control which can be used in any direction.



8

Power saving, GREENPLUG system

- This power saving technology developed by Coway, can remember and adjust according to the most used and least used time of the day. This allows to consume less energy than normal mode. (Power consumption may differ from different environment.)

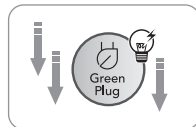

DEAR CUSTOMERS

Thank you for using the **Coway Self-Sterilising Bidet.**

Please read this user manual to use and maintain the product correctly.

If you encounter any problem while using the product, please refer to the user manual to solve the problem.

CONTENTS

Product Information

| 03 | **Safety precautions**

Power Supply
Installation
Operation
Other

| 11 | **Part names**

Front/Rear View
Installation kit

Maintenance

| 23 | **Installation**

Remove existing toilet seat
Install product
Install the remote control
Precautions for placing the remote controll

| 28 | **Cleaning**

Clean the nozzle
Clean the product body
Removing the product

| 31 | **Maintenance**

| 32 | **Filter replacement**

How to use

| 13 | **Important!**

How to connect with the remote control (pairing)
How to set special modes

| 16 | **Buttons and display panel**

| 19 | **Automatic sterilisation/ Rear cleansing with sterile water**

| 20 | **Choosing the desired cleansing**

For rear cleansing
For front cleansing
For child function (cleansing)

Others

| 33 | **Troubleshooting**

| 35 | **Product Specifications**

- Always keep the user manual in an easily accessible location. -

SAFETY PRECAUTIONS

Please follow the instructions for your own safety.

Please read this information for your own safety and to prevent property damage. Please read the precautions carefully and use the product correctly.

- ⚠ DANGER:** Critical injury or even death could result from negligence.
- ⚠ WARNING:** Serious injury or property damage could result from negligence.
- ⚠ CAUTION:** Minor injury or property damage could result from negligence.

Power Supply

- ⚠ Do not use a damaged power plug or faulty electrical outlet.**
Failure to do so may result in electric shock or fire.
- ⚠ Do not move the product by pulling the power cord.**
Failure to do so may result in electric shock or fire.
- ⚠ Do not forcefully bend the power cord or place heavy objects on it to prevent it from being damaged or deformed.**
Failure to do so may result in electric shock or fire.
- ⚠ If water gets into the electrical outlet, unplug the product and only use after it is completely dry.**
Failure to do so may result in electric shock or fire.
- ⚠ Remove any dust or water from the power plug pin.**
Failure to do so may result in electric shock or fire.
- ⚠ The power plug must be connected to 220V~, 50 Hz outlet only.**
Failure to do so may result in electric shock or fire.W

- ▲ Do not handle the power plug with wet hands.
Failure to do so may result in electric shock or fire.
- ▲ Do not connect and pull out the power plug repeatedly.
Failure to do so may result in electric shock or fire.
- ▲ Unplug the product before repairing, inspecting, or replacing parts.
Failure to do so may result in electric shock or fire.
- ▲ Use an individual power outlet, not a power strip that is being used by several other appliances.
Failure to do so may result in electric shock or fire.
- ▲ Unplug the product if the product will not be in use for a prolonged period.
Failure to do so may result in electric shock or fire.
- ▲ If the power cord is damaged, do not replace the cord by yourself. Contact the Coway Service Center to have it replaced.
Failure to do so may result in electric shock or fire.
- ▲ If the power cord is damaged, do not replace the cord yourself.
Failure to do so may result in electric shock or fire.

Installation

- ▲ Do not install near electrical heaters.
Failure to do so may result in fire.
- ▲ Do not use or store any flammable gas or materials near the product.
Failure to do so may result in electric shock or fire.
- ▲ Do not install in locations exposed to moisture, dust or places where water can be splashed onto the product.
Failure to do so may result in electric shock or fire.

SAFETY PRECAUTIONS

⚠ DANGER: Critical injury or even death could result from negligence.

⚠ WARNING: Serious injury or property damage could result from negligence.

⚠ CAUTION: Minor injury or property damage could result from negligence.

⚠ Use tap water as the main water supply.

Using industrial water or gray water may cause skin damage or disease.

⚠ Do not connect the main water supply to the hot water pipe.

This may result in a malfunction or an accident. Make sure to connect the product to the cold water pipe.

⚠ Do not use the product in a location exposed to direct sunlight.

This may result in discoloration.

⚠ After installation, check all the water supply connections to find out whether there is any leakage.

Rubber washers must be inserted in every T-shaped connector.

Operation

⚠ If the product produces strange noise, burnt smell or emits smoke, unplug immediately from the electrical outlet and contact the Coway service center.

Failure to do so may result in electric shock or fire.

⚠ Do not place an electrical heater near the product or dispose any burning materials such as a lit cigarette in the toilet.

This may result in product deformation or fire.

- ▲ Do not use the product in locations exposed to excessive moisture and do not splash water onto the product.
Failure to do so may result in electric shock or fire.
- ▲ Do not block the warm air outlet with your hand.
This may result in skin burns or fire.
- ▲ Do not insert a wire or sharp object in any product gaps or the warm air outlet.
This may result in electric shock, fire, or product damage.
- ▲ Do not place any containers filled with water, medicine, food, metallic objects, or any flammable material on top of the product.
Any foreign material inserted into the product may result in electric shock or fire.
- ▲ Do not use the product if it is not working properly.
- * Unplug the product immediately, close the valve for the main water supply, and contact the Coway service center. Failure to do so may result in electric shock or fire.
- ▲ Close the valve for the main water supply when replacing the filter.
Failure to do so may result in electric shock or product damage.
- ▲ For children, elderly, or those who cannot adjust the temperature themselves or have sensitive skin, set the water temperature and seat temperature to "L" or "Off" respectively and do not use the product for more than 30 minutes continuously. Failure to do so may result in low temperature burns.
- * A low temperature burn refers to any injuries that occur when skin is in contact with heat of around 40 °C for a prolonged time.
 - * If the seat temperature remains high for more than 45 minutes, it automatically reverts to a low temperature.
- ▲ Do not stand or place heavy objects on the seat cover.
This may result in product damage or malfunction.

SAFETY PRECAUTIONS

⚠ DANGER: Critical injury or even death could result from negligence.

⚠ WARNING: Serious injury or property damage could result from negligence.

⚠ CAUTION: Minor injury or property damage could result from negligence.

⚠ The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

⚠ Do not open/close the seat cover using excessive force or lean on the cover.

This may result in product damage or malfunction.

*** “Soft opening technology” is applied to the seat cover to open and close slowly.**

⚠ Take caution that urine does not come in contact with the nozzle, warm air exhaust or any part of the surface.

Failure to do so may result in bad odors or malfunctions.

⚠ If the product will not be used for a long time, unplug it, close the valve of the main water supply, and drain the water out from the water tank.

(For more details, see page 29)

⚠ This wireless product may experience electrical interference.

The following situations may result in temporary deactivation of communication (sending/receiving) or change in reception due to the interference of signals between the remote control and other appliances.

- If the maximum receiving distance is exceeded (10 m linear distance between the bidet and remote control without any obstacles).**
- If the battery of the remote control is low.**
- If there are obstacles around the bidet that interfere with the signal.**
- If the location of the product is very cold.**

-
- If the product is located near a police station, public office, broadcasting station, military base, transmitting tower, airport or port.
 - If a remote control for another bidet nearby is being used nearby. If there is a problem with the remote control, use the side buttons on the bidet for operation.

Contact the Coway service center for examination if the problem persists.

- * **Do not carry or store the remote control with other communication devices, such as a walkie-talkie or a mobile phone. This may cause the product to malfunction due to signal interference.**
- **The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.**

SAFETY PRECAUTIONS

⚠ DANGER: Critical injury or even death could result from negligence.

⚠ WARNING: Serious injury or property damage could result from negligence.

⚠ CAUTION: Minor injury or property damage could result from negligence.

Other

⚠ Before taking a shower or cleaning the bathroom, unplug the power plug and take caution not to splash water or detergent on the product.

Failure to do so may result in electric shock or fire.

*** If foreign materials enter the product, unplug it and turn off the main water valve, and contact the Coway service center.**

⚠ Do not disassemble, repair, or modify the product yourself. This may result in electric shock, fire, or product damage.

⚠ Do not separate the seat from the bidet. This may result in electric shock, fire, or product damage.

⚠ Unplug the product before cleaning, and do not splash water or use a thinner, benzene, hydrochloric acid cleaners, or detergents containing vegetable oil.

This may result in corrosion, discoloration or scratches.

*** Use a soft cloth or sponge to clean the product.**

⚠ Do not pull out the bidet hose or connection hose using excessive force.

This may result in leakage or malfunction.

⚠ Kindly use the new hose-sets supplied for the appliance and do not reuse the old hose-sets.

- ⚠ Children are not allowed to play with the appliance for safety reasons.
- ⚠ Children should be supervised to ensure that they do not play with the appliance.
- ⚠ Cleaning and user maintenance shall not be made by children without supervision.
- ⚠ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- ⚠ This appliance can be used by children aged from 8 years and above, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge only if they have been given supervision or instruction concerning usage of the appliance in a safe way and understand the hazards involved.

**Tips**

This product is only intended for use in the bathroom and should be used in accordance with the user manual. Do not use it for any other purposes.


PART NAMES

Front/Rear View



Installation kit


2 Anchor screws



2 Anchor rubbers



2 Anchor washers



2 Anchor nuts



1 Bidet hose




1 Filter clip




1 Installation adapter



1 MF



1 Filter fixing stopper



1 Installation plate



2 Fixing sliders



1 Silicone sealant



3 AAA batteries

* Parts mentioned above may vary depending on the manufacturer.

IMPORTANT!

■ Connect product to power.

A power source must be supplied to the product for it to function properly. The bidet only functions properly when it is connected to power.



Tips



This product is for 220V~, 50 Hz only.

Connect the power plug to a grounded electrical outlet for 220V~, 50 Hz.

■ Open the main water supply valve.

A water source must be supplied to the product for it to function properly.

After completing the installation, and before using, remove the protective film on the product and the remote control.

■ Check the remote control before use.

The remote control will not function properly if it is not paired or if the bidet is switched off.

If the bidet does not work when you press a button on the remote control, turn on the bidet and set the pairing connections.

When batteries are low and need to be replaced, the LED will flash 3 times whenever a button is pressed. It will eventually stop flashing and the remote control will stop working as the batteries run out.

*** Batteries are not covered by the warranty. You need to purchase and replace the batteries separately.**

■ Check the GREENPLUG before use.

- Setting up the GREENPLUG.

· It allows smart control of the product based on user history.

· Regular usage time: Seat temperature will be set to "L".

· Non-usage time: On standby mode, seat temperature is kept at 23 °C.

· On standby mode, water temperature is kept at 20 °C. (Regular usage/Non-usage time)

· After sitting the temperature of water and the seat temperature are switched to user settings.

- Setting up general power saving mode.

· After 1 minute: Seat temperature will be switched to "L".

· After 30 minutes: The power indicating LED on the control panel turns off and the power saving mode is initiated.

■ GREENPLUG mode.

Press and hold the GREENPLUG button until the GREENPLUG indicator lights up and the function is initiated.

■ After installation.

Check there are no leakages between main water supply valve and hose.

There must be a rubber washer between the T-shaped connector and the main water supply valve.

Use a soft, dry cloth to wipe the bidet and the remote control after shower or cleaning the bathroom.

■ Regular filter replacement.

Replacing the filter regularly is crucial for hygienic cleansing. If you are using an old filter, the filtering performance will degrade and may spray unfiltered water. Always replace the filter according to the recommended interval.

*** Filter replacement interval: Every 4 months.**

■ Prolonged periods of non-usage.

If the product has been unused for an extended period of time, make sure to replace the filter and clean the nozzle, seat and the product according to appropriate cleaning methods before use. (For more details, see page 27)



Tips


Remove the protective film on the remote control before use.

How to connect with the remote control (pairing)


■ How to pair the remote control with the product.

Pairing is creating a wireless connection between the controller of the remote control and the bidet. Follow the instructions below to correctly pair the remote control with the bidet.

1. Plug in the bidet, then press and hold the Cleansing button together with the Nozzle Cleaning button for 2 seconds. There will be a "beep" sound and the LED indicator will blink to show that the pairing mode is being accessed.

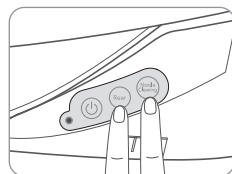


2. Within 15 seconds of entering the pairing mode, press and hold the Cleansing button on the remote control for more than 5 seconds to pair with the product.

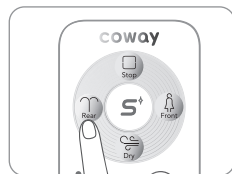

3. The LED indicator (WIDE, Warm water/Drying temperature, Seat temperature, GREENPLUG) of the remote control will blink 3 times in orange, after which the pairing process is complete. (Wait for approximately 15 seconds after the pairing process completed.)

* You will be automatically directed out of the pairing mode with a beeping sound after 15 seconds, regardless of whether pairing is complete or not. (You have to complete pairing within 15 seconds or try again.)

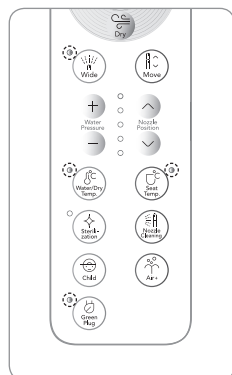


IMPORTANT!

How to set special modes

Press and hold the Power button together with the Cleansing button on the control panel for 2 seconds. There will be a "beep" sound and the LED will turn off, indicating that the mode is being accessed.

* You will be automatically directed out of the special mode if no action is taken for 10 seconds.




1. Silent mode

Press the Power button on the control panel. There will be a "beep" sound and the LED will indicate the current status. (ON : Activated, OFF : Deactivated) Press the Power button to activate or deactivate the silent mode. The silent mode also mutes the button sounds on the remote control.

- Activated : LED on the main body turns on.

- Deactivated : LED on the main body turns off.

* The silent mode is initially being set as deactivated.

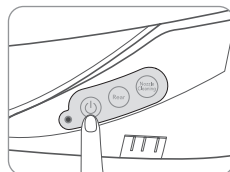


2. Seat sensor lock mode

Press the Cleansing button on the control panel and there will be a "beep" sound together with the display of current setting on the LED. (ON : Activated, OFF : Deactivated) Press the Cleansing button to activate or deactivate the seat sensor lock mode. If the seat sensor lock mode is activated, the cleansing, bidet and dry functions are only enabled when the sensor detects a human body.

- Activated : LED on the main body turns on.

- Deactivated : LED on the main body turns off.

* The seat sensor lock mode is initially being set as activated.

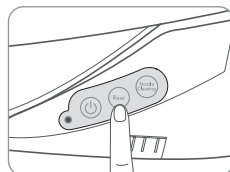


3. Automatic drain mode

Press the Nozzle Cleansing button on the control panel and there will be a "beep" sound with a display of the current settings on the LED. (ON : Activated, OFF : Deactivated) Press the Nozzle Cleansing button to activate or deactivate the automatic drain mode. If the automatic drain mode is activated, water in the tank will be automatically drained via the nozzle and the hose to maintain a hygienic environment after the product is unused for 48 hours.

- Activated : LED on the main body turns on.

- Deactivated : LED on the main body turns off.

* The automatic drain mode is initially being set as deactivated.

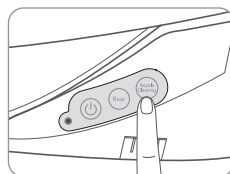


4. Sterile water cleansing mode

Press the Nozzle Cleansing button on the side control panel for 2 seconds and there will be a "beep" sound and the current status will be displayed with the LEDs. (ON: Activated, OFF: Deactivated) Press and hold the Nozzle Cleansing button for 2 seconds to activate or deactivate the sterile water cleansing mode. The sterile water cleansing mode uses electrolysed sterile water for 2 seconds before proceeding with the general cleaning process. When deactivated, only the general cleaning process is carried out.

- Activated : LED on the main body turns on.



- Deactivated : LED on the main body turns off.

* Sterile water cleansing mode is initially being set as activated.

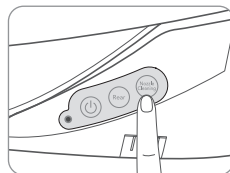

BUTTONS AND DISPLAY PANEL

Product body

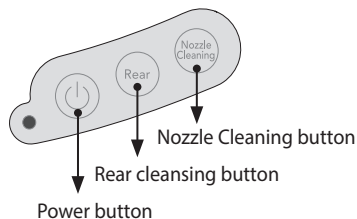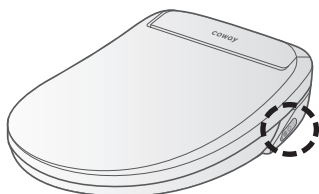

RF remote control

● Display panel ■ Control panel

1 Stop button

2 Rear cleansing button

3 Front cleansing button

4 Dryer button

5 WIDE Adjustment button

6 Move function button

7 Water Pressure Adjustment button

8 Nozzle Adjustment button

9 Cleansing water / dryer temperature adjustment button

10 Seat Temperature Adjustment button


11 Sterilisation button

12 Nozzle Cleansing / Cleaning function button

13 Child function button

14 AIR+ function button

15 GREENPLUG button

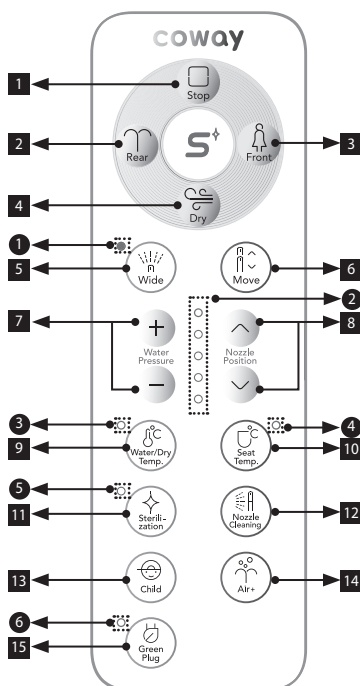

1 WIDE function indicator

2 Water pressure adjustment/ Nozzle position indicator

3 Cleansing water / dryer temperature adjustment indicator

4 Seat temperature adjustment indicator

5 Sterilisation function indicator

6 GREENPLUG indicator

BUTTONS AND DISPLAY PANEL

Display panel



- 1 WIDE function indicator**
When the WIDE button is pressed, the LED changes to following the levels : 1 (Green) → 2 (Red) → Off



- 2 Water pressure indicator / Nozzle position indicator**
Press the Water Pressure button to adjust the pressure from level 1 to 5.

* When the Move button of the nozzle is pressed, the LED changes according to the position of the nozzle.



- 3 Cleansing water / dryer temperature adjustment indicator**
The indicator lights in the order of : Low (Green) → Medium (Orange) → High (Red) → Off.

* While cleansing/bidet mode is activated, the indicator displays warm water temperature adjustments. While the dry function is activated, the indicator displays drying temperature adjustments.



- 4 Seat temperature adjustment indicator**
Press the Seat Temperature Adjustment button, the LED changes according to the temperature of the seat : Low (Green) → Medium (Orange) → High (Red) → Off.



- 5 Sterilisation function indicator**
The indicator lights up when the sterilisation function is activated.



- 6 GREENPLUG indicator**
LED changes according to the mode settings : GREENPLUG (Green) → General power saving mode (Orange) → Non-power saving mode (Off).

Control Panel



- 1 Stop button**
Stops all current operating functions.



- 2 Rear cleansing button**
Press the button to activate the rear cleansing function.



- 3 Front cleansing button**
Press the button for the cleansing functions for women.



- 4 Dryer button**
Press the button to use the dry function. This helps to dry excess moisture after using the front/rear cleansing function.



- 5 WIDE Adjustment button**
WIDE function allows softer cleansing on a wider area. Press the button to adjust the range of water sprayed while using the front/rear cleansing functions. Press the WIDE button to adjust the level : 1 (Green) → 2 (Red) → Off.



- 6 Move function button**
Press the button to select the move function. When the cleansing/bidet operation is being selected, the nozzle moves back and forth to provide a wider range of cleansing.



7 Water Pressure Adjustment button

Water pressure can be adjusted in 5 levels. The selected water pressure indicator will light up each time when the button is being pressed.



9 Cleansing water / dryer temperature adjustment button

Press the button to control warm water/drying temperatures. When the Warm Water/Drying Temperature Adjustment button is being pressed, the LED changes to following the levels: Low (Green) → Medium (Orange) → High (Red) → Off.

* While on standby or when front/rear cleansing function is activated, the indicator displays the warm water temperature adjustments. While the dry function is activated, the indicator displays the drying temperature adjustments.



11 Sterilisation button

Press the button to activate the automatic sterilisation function. LED changes between two levels: Hose sterilisation (20 seconds) → Nozzle sterilisation 2 (15 seconds).

* Automatic sterilisation: Based on 12 bidet uses a day, 1 automatic sterilisation occurs.

* Manual sterilisation: Recommended use is twice a day.

* Level 2 automatic sterilisation is activated when the seat sensor does not detect a human body.

* Manual sterilisation function is not activated when cleansing/bidet/child/drying functions are in operation. If the button is pressed once more while the sterilisation function is in operation, there will be a "beep" sound and sterilisation will end.



13 Child function button

This function is specifically designed for children whose skin is more sensitive than adults. Press the button and cleansing will occur for 1 minute and drying for 2 minutes. The nozzle will position according to the size of the user and low water pressure will be used.

* The child function operates regardless of the seat sensor detecting a human body.

* Move, water pressure, seat temperature, warm water/drying temperature functions can be adjusted while using the child function. Press the Child function button again while using the cleansing or drying functions for an additional cleansing or drying function.



15 GREENPLUG button

Press the button to activate the GREENPLUG mode.

Non-power saving mode → GREENPLUG mode

- Press and hold the GREENPLUG button on the remote control for 2 seconds, there will be a "beep" sound and the green LED of the GREENPLUG function will turn ON (GREENPLUG)

GREENPLUG mode → General power saving mode

- Press and hold the GREENPLUG button on the remote control for 2 seconds, there will be a "beep" sound and the orange LED of the GREENPLUG function will turn ON (General power saving mode)

General power saving mode → Non-power saving mode

- Press and hold the GREENPLUG button on the remote control for 2 seconds, there will be a "beep" sound and the green LED of the GREENPLUG function will turn off (Non-power saving mode)

* The GREENPLUG is initially set as activated.



8 Nozzle Adjustment button

Press the button to move the nozzle back or forth while cleansing/bidet cleansing function is in operation. The nozzle position can be adjusted in 5 levels.



10 Seat Temperature Adjustment button

Press the button to adjust the temperature of the seat. When the Seat Temperature Adjustment button is pressed, the LED changes according to the temperature of the seat: Low (Green) → Medium (Orange) → High (Red) → Off.



12 Nozzle Cleansing/Cleaning function button

Nozzle Cleansing: Press the button while the product is turned on and the nozzle will be cleansed for 10 seconds. **Nozzle Cleaning:** Press the button while the product is turned off and the cleansing/bidet nozzles will protrude consecutively and self-clean for a total of 3 minutes.



14 AIR+ button

Air+ function adds air to the water spray to increase the cleansing ability. Press the Air+ button for a more powerful and efficient cleansing.

AUTOMATIC STERILISATION/REAR CLEANSING WITH STERILE WATER

Automatic sterilisation system

■ What is an automatic sterilisation function.

Good hygiene is achieved with the 2-step sterilisation of the hose → and nozzle, which ensures hygiene both inside and outside of the bidet.

This 2-step total automated system for sterilisation is operated once a day (based on 12 bidet uses a day). Press the sterilisation function button to use the sterilisation function manually.


The sterilisation process will operate for 20 seconds for the hose → 15 seconds for the nozzle. (Recommended use of manual sterilisation up to twice a day.)

* Sterile water may not be available depending on water quality. (E.g. Sterile water may not be available if underground water is used as a supply.)



■ Automatic hose sterilisation.


This function automatically sterilises all water paths inside the product to eliminate 99.9 % of all germs, including colon bacillus and enterococcus. With the hose sterilisation function, you do not need to worry about bidet contamination when using this product.

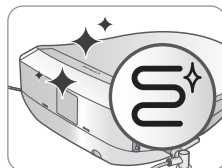

■ Automatic nozzle sterilisation


The function eliminates 99.9 % of germs including colon bacillus and enterococcus by spraying sterile water onto the nozzle, which is the most susceptible place for contamination. The nozzle is automatically sterilised during the 2-step sterilisation function and also when the nozzle retracts after using the front/rear cleansing function.

Concept of producing sterile water: Without adding chemicals, tap water is electrolysed to sterile water, eliminating 99.9 % of all germs, including colon bacillus and enterococcus.

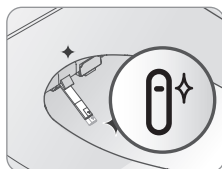

Rear cleansing with sterile water

Rear cleansing function uses electrolysed sterile water for 2 seconds before proceeding with the general cleansing process. Sterile water is created by electrolysis without any chemicals, guaranteeing safety and hygiene.

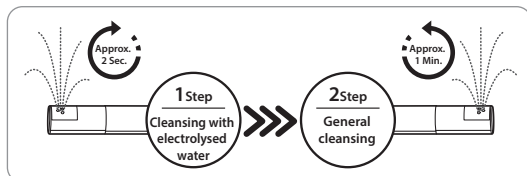

* For more details, see page 15, "How to set special modes" on deactivating the initial 2-second sterilisation function.

* If this function is deactivated only general cleansing will be operated when rear cleansing is selected.

CHOOSING THE DESIRED CLEANSING

For rear cleansing


■ Cleansing

- Sit down and press the Cleansing button on the control panel.
- The nozzle drains cold water before cleansing water is sprayed so cleansing begins at the previously set temperature.
 - Cleansing water will spray for 1 minute and stop automatically.
 - When the nozzle retracts, the nozzle is cleaned automatically for 6 seconds.

* Press the Move button to adjust the position of the nozzle.

* Press the Cleansing button again while in operation for an additional minute of cleansing.

* You can adjust the warm water temperature, water pressure and nozzle position according to your preference.

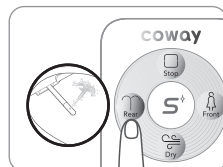

■ Move


Sit down and press the Move button on the control panel.

- The nozzle moves back and forth to cover a wide area.

* This continues while the cleansing function is used.

* Press the Move button to adjust the position of the nozzle.

* Press the Move button again to stop the nozzle.

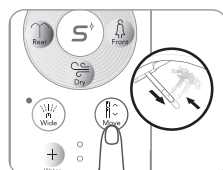

■ Dry

Sit down and press the Dry button on the control panel.


- Warm air is emitted for 2 minutes to dry the wet areas.

* Wipe the wet area lightly before using dry feature to speed up drying.

* Press the Warm Water/Air Temperature button to adjust air temperature.

* Press the Dry button again during use to add an additional 2 minutes of drying.

* If you press the Dry button while cleansing, cleansing function stops so you can start drying immediately.

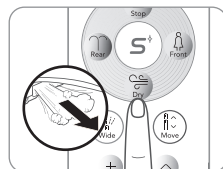


■ Stop

Press this button to stop all currently operating functions.

- All current operating functions stop.

* The dry function stops 2 seconds after the Stop button is being pressed.

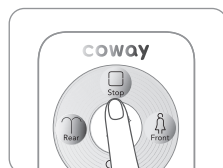

CHOOSING THE DESIRED CLEANSING

For front cleansing

■ Front cleansing


Sit down on the bidet and press the Front Cleansing button on the remote control.

- The front nozzle drains cold water in the nozzle, before water is sprayed so cleansing can be done at a warm temperature.
- Cleansing water will spray for 1 minute and stop automatically.
- When the nozzle retracts, the nozzle gets cleaned automatically for 6 seconds.

* Press the Move  button to adjust the position of the nozzle.

* Press the Front Cleansing button again while in operation for an additional minute of cleansing.

* You can adjust the warm water temperature, water pressure and nozzle position according to your preference.

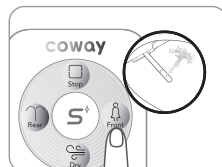

■ Move


Sit down and press the Move button on the remote control.

- The nozzle moves back and forth to cover a wide area.

* This continues while the cleansing function is being used.

* Press the Move  button to adjust the position.

* Press the Move button once again to stop the nozzle.

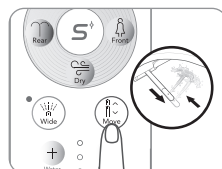

■ Dry

Sit down and press the Dry button on the remote control.


- Warm air is emitted for 2 minutes to dry the wet areas.

* Wipe the wet area lightly before using dry feature to speed up drying.

* Press the Warm Water/Air Temperature  button to adjust air temperature.

* Press the Dry button again during use to add an additional 2 minutes of drying.

* If you press the Dry button while cleansing, cleansing function stops so you can start drying immediately.

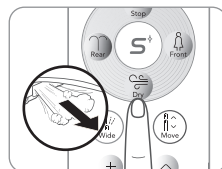


■ Stop

Press this button to stop all currently operating functions.

- All current operating functions stop.

* The dry function stops 2 seconds after the Stop button is being pressed.

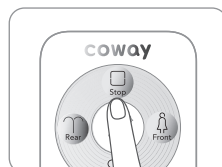

For child function (cleansing)

■ Child function

Sit down and press the Child button on the remote control.


There will be a beep sound and the child function will be activated.

- You can adjust the water pressure, water temperature, warm air and nozzle position according to the child's preference. [Water pressure : Level 1 (Soft spray), Warm water temperature : Level 2 (Warm water), Nozzle position : Level 5 (Maximum), WIDE Level 1 (Wide and soft spray)]
- Cleansing water will be sprayed for 1 minute then will switch automatically to the dry function. [Drying temperature : Level 2 (Warm air)]
- The nozzle retracts after cleansing and will be automatically cleaned for approximately 6 seconds.

* Press the Move button to adjust the position of the nozzle.

* You can adjust the warm water temperature, water pressure and nozzle position according to your preference.

* Press the Child button again while in operation for an additional minute of cleansing.

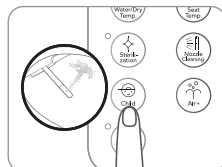

■ Move


Sit down and press the Move button on the remote control.

- The nozzle moves back and forth to cover a wide area.

* This continues while the cleansing function is being used.

* Press the Move button to adjust the position of the nozzle.

* Press the Move button again to stop the nozzle.

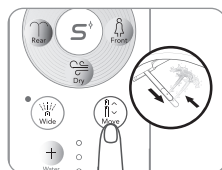

■ Dry


Automatically activated when cleansing is completed.

- Warm air is emitted for 2 minutes to dry the wet areas.

* Wipe the wet area lightly before using dry feature to speed up drying.

* Press the Warm Water/Air Temperature button to adjust air temperature.

* Press the Child button again during use to add an additional 2 minutes of drying.

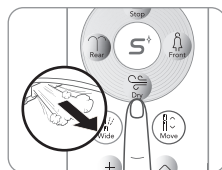

■ Stop

Press this button to stop all currently operating functions.

- All current operating functions stop.

* The dry function stops 2 seconds after the Stop button is being pressed.



INSTALLATION

■ Install product

Tighten the anchor nuts so the bidet is attached firmly onto the toilet.

■ Installation location

The bidet is for use in the bathroom so make sure to install it in a place where water cannot splash it directly.

■ After installation

Store the existing toilet away from direct sunlight.

■ Cold water pipe

Make sure to connect the bidet to a cold water pipe.
(If it is connected to the hot water pipe, the filter and hose may be damaged.)

■ Install remote control

Install the remote control on the side of the bidet.
Remove any dust or foreign substance from the surface before applying the double-sided tape for the remote control holder.
Use silicone caulk to attach the remote control holder.

■ Replacing batteries in the remote control

Place a screwdriver or a coin into the groove and turn anti-clockwise. The screw will become loose and the battery cover will be removed. Remove and replace the old batteries (3 X 1.5 V AAA). Reattach the cover and tighten the screws clockwise.

* Take caution not to lose the screws.




Tips

Consult with a Coway technician for the detailed installation method to ensure optimal performance of the product.

Remove existing toilet seat


Remove the anchor nuts to detach the existing toilet seat (①) and the cover (②).

* Store the removed toilet seat and cover away from direct sunlight.

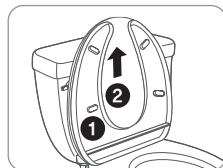


Install product

1. Close the main water supply valve (①) then remove the existing water tank hose (②).

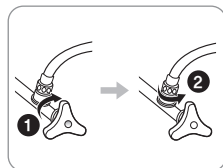


2. Apply rubber cone washers, the T-shaped connector and the water tank hose in order to the existing water pipes. Connect the bidet hose to the T-shaped connector.

* Rubber cone washers must be inserted into every T-shaped connector.
 * Fully tighten the nuts at the top and bottom of the T-shaped connector in a clockwise direction.

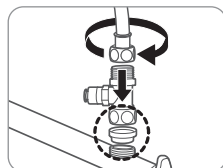


3. Fix the MF filter onto the filter fixing stopper in the direction as shown in the image.

* Take caution as the bidet may not function properly if the filter is loose.

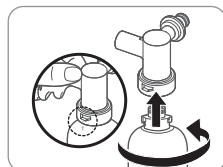


INSTALLATION

4. Place the fixing slider over the installation plate on the toilet, insert the fixing bolts, and fasten the nuts so that the installation plate is fixed.

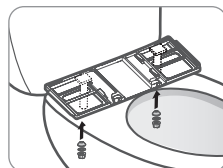

5. Match the back of the product to the installation plate, by pressing the button down. (Hold the bidet body with both hands and push until it clicks into place).


⚠ If the bidet is not securely fitted, retighten the nuts.

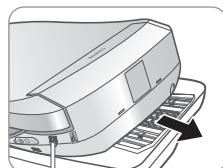

6. Connect the filter to the back of the bidet and use the filter clip to fit it in place.

⚠ Check whether the filter clip is in place.


If it is not, the filter fixing stopper may be released from the product when you open the main water supply valve. This can cause leakage and possible injury.

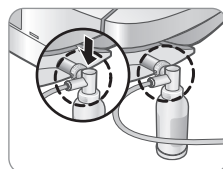


7. Connect the bidet hose to the filter fixing stopper and the T-shaped connector.

* The bidet hose needs to be as short as possible.

If it is too long, it may become a source of noise.

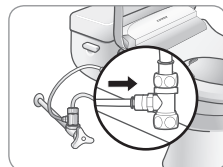

8. Open the valve for the main water supply.

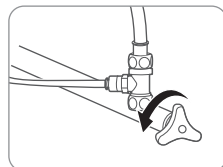


9. Connect the power plug to an electrical outlet.

* The product should be connected to a grounded outlet only. Using a grounded outlet reduces the risk of electric shocks if an electrical short circuit occurs.

⚠ Connect the power plug to a grounded outlet dedicated for the product.


⚠ If unavoidable, use an extension cord with grounding terminals for 250V, 16A or higher.

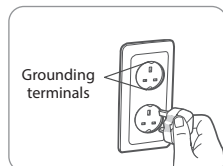

Install the remote control

1. Clean the surface with a dry cloth and install the remote control.


* Moisture may weaken the adhesion.

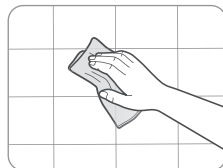


2. Apply sealant in 8 grooves at the back of the adjustable bracket. The sealant should be 2mm thick.

* Take caution as too much sealant may get on the double-sided tape and weaken its adhesion.

* Make sure to use a sealant for installation. If double-sided tape is being used without sealant, the holder may fall as the adhesion may weaken due to moisture.

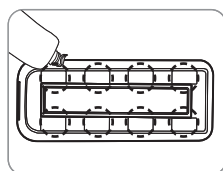

3. Remove the protective film on the double-sided tape at the back of the adjustable bracket.

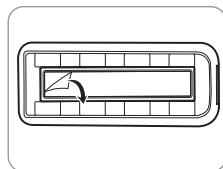

4. Attach the adjustable bracket on the wall and press the center with both hands for more than 10 seconds.

* It is recommended not to place the remote control on the adjustable bracket for a day in order to maximize the adhesion of the double-sided tape and the sealant.




INSTALLATION

Precautions for placing the remote control


■ Example of correct usage

Precautions for placing the remote control to prevent it dropping : Place the remote control in the holder from front.

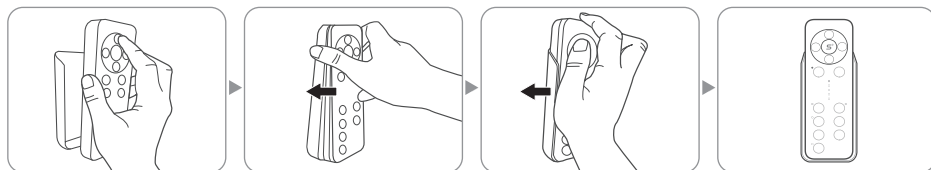

* Place the remote control in the holder from the front side- as shown in the image.

■ Example of wrong usage

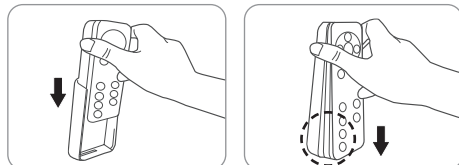


* Do not place the remote control on the handle in a downward sliding motion, as it may drop and become damaged.

CLEANING


Clean the nozzle

1. Press and hold the Power button for 2 seconds to turn off the bidet.

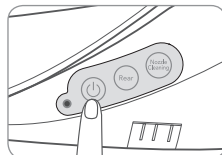


2. Press the Nozzle Cleaning button on the control panel.

- The cleansing nozzle protrudes and cleansing water is sprayed on it.
- The cleansing nozzle is being cleaned.

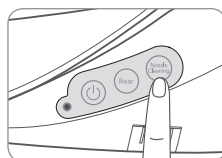


3. Press the Nozzle Cleaning button on the control panel again.

- When the cleansing nozzle reverts, the bidet nozzle protrudes and the cleansing water is sprayed on it.
- The bidet nozzle is being cleaned.

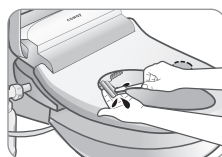

4. Press the Power button or Nozzle Cleansing button on the control panel again after cleaning the nozzle, then the bidet nozzle will return to its original position.

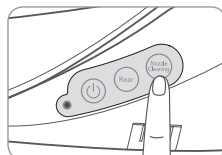

CLEANING

Clean the product body

■ Use a soft cloth or sponge with a neutral detergent to clean the bidet.

- Failure to do so may result in product deformation or damage.

⚠ Disconnect the power plug from the electrical outlet when removing and cleaning the nozzle/drying duct.

⚠ The nozzle/drying duct can be washed with water, but it must be completely dry before reassembling.

⚠ The product body and the remote control should never be cleaned using water.



Tips

⚠ Do not use a thinner, benzene, detergents with abrasives or rough scrubbers on the product.

⚠ Make sure to follow the above instructions as, unlike other surfaces, the seat is highly susceptible to scratches and rough scrubbers can scratch or peel the surface.

⚠ Do not apply excessive force when cleaning the nozzle as it may break.


⚠ Do not drop or apply force to the remote control.

⚠ Do not drop the remote control in water or use water to clean it.

⚠ Removing the nozzle duct.


- Hold the end of the duct as shown in the image and separate using an upward and downward motion.

- Be cautious to prevent the duct from falling into the toilet.

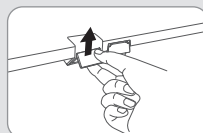


⚠ Removing the drying duct

- Remove the drying duct in the directions as shown in the image.

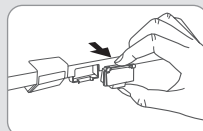


Removing the product

1. Disconnect the power plug from the electrical outlet.

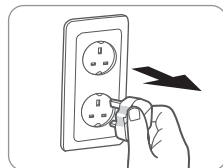


2. Lock the main water supply valve.

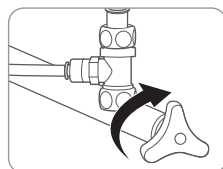


3. Press and hold the button at bottom right part of the product and separate the product by holding both sides and pulling it from the installation plate.

- Unplug the power and remove the bidet hose when removing the product.

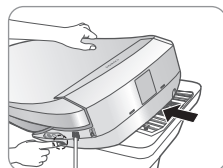


4. Place a bucket of 1L or more under the drain plug of the product.

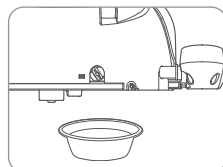

5. Turn the drain cap 90 degrees anti-clockwise ① and pull it in the direction of ② to remove it.

- Open the drain and completely drain the water tank.

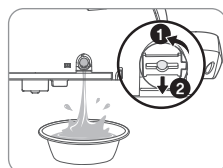

Tips

Unplug the product if it will not be used for a long time.

MAINTENANCE

Regularly examine the product to guarantee safe usage.

Check the following items regularly to maintain the bidet at its best condition.

Maintenance

■ Power

- When the power cord is being moved when connected, does the display panel blink as it is turned on and off?
- Is there any part of the electric power cord which is hotter than usual?
- Is there any part of the electric power cord which is deformed, discolored or damaged?



If you experience any of these problems, stop using the product immediately and contact the service center.


■ Display panel

- Does the beep of the product sound abnormal or is the indicating display blinking abnormally? If a beep sounds abnormal or the indicator blinks abnormally, contact the service center immediately.


FILTER REPLACEMENT

Replace the filter!


1. Unplug the power plug and close the main water supply valve.

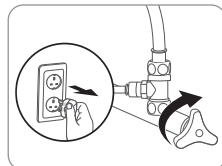


2. Turn the MF to remove it from the filter fixing stopper in the direction as shown in the image.

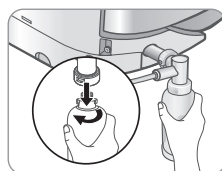

3. Insert the new MF in filter fixing stopper in the direction as shown in the image until it is firmly in place.

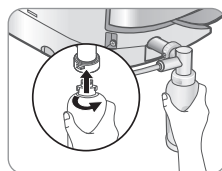

4. Open the main water supply valve and use after connecting the power plug.

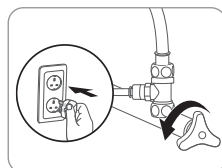

TROUBLESHOOTING

Malfuncions can occur due to incorrect operation of the bidet or other minor reasons, and may not mean the product is broken. Check the following items to resolve such problem without assistance from the service center. If you cannot resolve the problem after checking the following items, please contact the service center.

Problem	Check	Possible Solutions
The product is not working.	• Is the power plug disconnected?	Plug the power plug into an electrical outlet.
	• Is there a power outage?	Check whether or not there is a power outage.
	• Is the product turned off?	Turn on the product. After the product is being switched off, the remote control does not work.
	• Does the LED flash when you press a remote control button?	When the batteries are dead the LED flashes twice whenever a button is pressed. Put new batteries in the remote control.
	• Does the LED light up when you press a remote control button?	The remote control will not work after a certain period of time has passed after the batteries die. Put new batteries in the remote control.
	• Is the remote control turned off?	Put new batteries in the remote control. Contact the Coway service center if the problem persists after the batteries are replaced.
No water is coming out.	• Is the water supply valve closed?	Open the valve for the main water supply.
	• Is the nozzle clogged with foreign substances?	Clean the nozzle apertures with a toothbrush to remove any foreign substances.
	• No water is coming out immediately after installation.	Check whether or not there is a water cut. (Please wait as it takes 1-2 minutes to fill the water tank immediately after installation.)
The water pressure is too weak.	• Is the water pressure being set to low?	Adjust the pressure level.
	• Is the nozzle clogged with foreign substances?	Clean the nozzle apertures with a toothbrush to remove any foreign substances.
	• Is the filter clogged with foreign substances?	Replace the filter.
The toilet seat and the cleansing water are not warm.	• Is the seat/warm water temperature set to "Off"?	Press the Seat/Warm Water Temperature button to adjust the temperature settings.
The air from the dryer is cold.	• Is the air dryer temperature set to "Off"?	Press the Dry Temperature button to adjust the temperature appropriately.
Water is leaking out from parts other than the nozzle.	• Is water leaking from the T-shaped connector?	Check whether the rubber washers are inserted into the T-shaped connector, then firmly retighten the nuts.
	• Water is leaking from the connection points in the bidet hose.	Push in the bidet hose at the connection points.
	• Water is leaking from the filter.	Check whether or not the filter is damaged.

Problem	Check	Possible Solutions
Water comes out even after the bidet is being stopped.	- Water flowing out, from the nozzle after cleaning, is a self-cleansing method and not a sign of a malfunction. - Sometimes water droplets around the nozzle may drop into the toilet. These droplets are formed from cleansing the nozzle or sterilisation and is not a sign of a malfunction.	
After plugging the power, there is buzzing noise from the main body.	This noise is produced from adjusting the position of the nozzle and is not a sign of malfunction.	
The product does not work even when I press a button.	The product comes with the seat sensor so functions will not work unless a user is seated.	
There is a whirring buzzing noise from the main body.	This noise is from operating the warm water heater and is not a sign of a malfunction.	
The remote control is not working.	- Check that the remote control has all 3 AAA batteries. - Check whether the batteries are dead or if the +/- terminals are damaged. - Replace low or damaged batteries. - Check that the 3 AAA batteries and the battery cover are correctly assembled. - Check if the product and the remote control are correctly paired (For more details, see page 10). - Check if the main body is turned on. The remote control will not work if the main body is switched off.	



Tips

The GREENPLUG mode sets the seat and water temperature as low, and it can be relatively cold when seated.
When the GREENPLUG mode is disabled, the settings on the temperature will be maintained.
For more details, see page 9 of the user manual regarding how to disable the GREENPLUG mode.

PRODUCT SPECIFICATIONS

Product Name		Coway Electronic Bidet BAS25-ATH
Model		BAS25-ATH
Rated voltage		220V~, 50 Hz
Power consumption		1 050 W
Frequency of Operation		2402 MHz to 2462 MHz
Modulation type		GFSK
Power cord		1.8 m
Water pressure		0.1 MPa - 0.68 MPa
Dimensions		412 mm (W) × 534 mm (D) × 161 mm (H)
Weight		4.5 Kg
Warm water cleansing device	Rear cleansing	Up to 0.62 L/min, automatic nozzle cleansing function
	Front cleansing	Up to 0.62 L/min, automatic nozzle cleansing function
	Rated time of operation	Approx. 1 minute of front cleansing and 1 minute of rear cleansing
	Water pressure control	MICOM control, 5 levels
	Warm water temperature control	4 levels (Off : Room temperature, Low : 32 °C, Medium : 35 °C, High : 38 °C)
	Maximum power consumption for warm water	1 000 W
	Tank capacity	0.6 L
	Safety device	Bimetal, Temperature sensor, Temperature fuse (prevents overheating)
Warm air drying device	Warm air temperature control	4 levels
	Rated time of operation	Approx. 2 minutes of drying
	Power consumption of heater	180 W
	Safety device	Bimetal, Temperature fuse (prevents overheating), Relay
Heated seat	Seat temperature control (Temperature after user sits)	4 levels (Off : Room temperature, Low : 31 °C, Medium : 34 °C, High : 37 °C)
	Power consumption of heater	50 W
	Safety device	Temperature sensor, Temperature fuse (prevents overheating)
MF	Lifespan	4 months (Based on 2.5 t/month, muddiness lower than 0.5 NTU)
	Dimensions	136 mm (Length) × 48 mm (∅)
Installation parts		Bidet hose (1), Anchoring washer (2), Anchoring screw (2), Anchoring nut (2), Anchoring rubber (2), Installation plate (1), Pre MF (1), Filter Fixing Stopper (1), Filter clip (1)
Other functions		Back/forth nozzle positioning, Move, Nozzle cleaning, Automatic sterilisation function, GREENPLUG mode, Child function
Temperature in use		0 °C - 40 °C
Remote control	Company information	World Hi-Tech
	Manufacturer/Country of origin	World Hi-Tech/Republic of Korea
	Names of Parts/Model	Specific low-power radio equipment (Radio equipment for wireless data communication system)/BAS25-ATH-TX

► The specifications are subject to change for the purpose of improving product performance.

MEMO

////////////////////////////////////

ฟีเจอร์

1

การออกแบบที่บางยังมีไส้หลอดผสมผสานเข้ากับโคมกับที่ได้อย่างลงตัว


- ควบคุมการทำงานด้วยระบบรีโมท ปรอทจากแสงควบคุมอุณหภูมิของหลอดไฟ เพื่อการใช้พื้นที่อย่างมีประสิทธิภาพ ด้านหลังของหลอดไฟเป็นทรงโค้งอย่างมีสไตล์ แยกต่างจากทรงเหลี่ยมอื่นๆ การออกแบบที่สวยงามและลงตัวของเบสิคนี้ เข้ากันได้ดีกับโคมทุกชนิด



2

ชำระล้างอย่างปลอดภัยด้วยน้ำที่ผ่านการฆ่าเชื้อ


- การชำระล้างอย่างถูกสุขอนามัยมากขึ้น ด้วยน้ำที่ผ่านกระบวนการฆ่าเชื้อด้วยไฟฟ้า 2 วินาที โดยไม่ใช้สารเคมีใดๆ

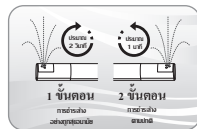

3

ฟังก์ชันปรับความกว้าง

- ฟังก์ชันปรับความกว้าง (WIDE) ใช้สำหรับชำระล้างอย่างนุ่มนวลในบริเวณที่กว้างขึ้น กดปุ่ม WIDE เพื่อเลือกระดับการฉีดน้ำ: สายน้ำตรงธรรมดา (ไฟ LED ปิด) → กว้าง (WIDE 1, ไฟ LED สีเขียว) → กว้างที่สุด (WIDE 2, ไฟ LED สีแดง) การกดปุ่ม WIDE ที่บีบจะทำให้ฉีดน้ำเป็นวงกลม ซึ่งเหมาะกับสรีระของสุขภาพสตรี และเพิ่มความนุ่มนวลสำหรับบริเวณที่บอบบาง

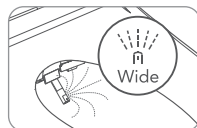

4

ฟังก์ชันการชำระล้างสำหรับเด็ก/Air+


- ฟังก์ชันเด็กนั้น ได้ออกแบบมาเป็นพิเศษสำหรับเด็ก ซึ่งมีหัวที่บอบบางกว่าผู้ใหญ่ ด้วยปุ่มเดียว ท่านสามารถเลือกการตั้งค่าที่เหมาะสมสำหรับเด็ก เช่นแรงดันน้ำต่ำ น้ำอุ่น สายน้ำแบบ WIDE 1 และตำแหน่งของหัวฉีดที่เหมาะสมกับสรีระของผู้ใช้เด็ก โหมดนี้จะทำการชำระล้าง 1 นาทีและเป่าแห้ง 2 นาที
- ฟังก์ชัน Air+ จะผสมอากาศเข้าในน้ำเพื่อเพิ่มประสิทธิภาพในการชำระล้าง ท่านสามารถเพิ่มประสิทธิภาพการชำระล้างได้ด้วยฟังก์ชัน Air+



5

ระบบฆ่าเชื้ออัตโนมัติประจำวัน (หัวฉีด 30)


- ฟังก์ชันฆ่าเชื้ออัตโนมัติจะทำความสะอาดของน้ำทั้งหมดภายในปีได้ และฟังก์ชันฆ่าเชื้อหัวฉีดจะฆ่าเชื้อหัวฉีดเป็นประจำ เพื่อรักษาความสะอาด

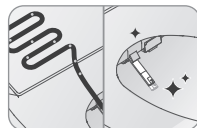

6

โครงสร้างที่แยกกันของหัวฉีดสแตนเลสและหัวฉีด/ท่อเป่าแห้ง

- หัวฉีดและท่อเป่าแห้งสามารถถอดความสกปรกได้ง่ายที่สุด จึงสามารถถอดแยกออกมาได้เพื่อความสะดวกในการทำความสะอาด

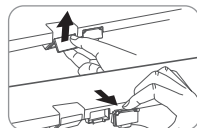

7

รีโมทคอนโทรล RF คุณภาพสูง


- สะดวกสบายมากขึ้นด้วยประสิทธิภาพการรับสัญญาณที่สูงขึ้นด้วยรีโมทคอนโทรลคลื่นความถี่วิทยุไร้สาย (RF) ที่สามารถใช้ได้ทุกทิศทาง



8

ประหยัดพลังงาน สมู GREENPLUG

- เทคโนโลยีการประหยัดพลังงานที่พัฒนาโดย Coway สามารถจดจำและปรับตามช่วงเวลาที่ใช้งานน้อยที่สุด และช่วงเวลาที่ใช้บ่อย จึงทำให้สามารถประหยัดพลังงานได้ค่ากว่าโหมดปกติ (การใช้พลังงานอาจแตกต่างกันไปตามสภาพแวดล้อม)

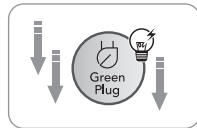

เรียนลูกตา

เราขอขอบคุณ ที่ท่านใช้ ผลิตภัณฑ์บีบีรุ่นชำระล้างและฆ่าเชื้อในตัว (Self-Sterilising) ของ Coway โปรดอ่านคู่มือผู้ใช้นี้ เพื่อการใช้งานและดูแลรักษาอย่างถูกต้อง หากท่านพบปัญหาระหว่างการใช้งานผลิตภัณฑ์นี้ โปรดอ้างอิงคู่มือผู้ใช้เพื่อแก้ไขปัญหา

เนื้อหา

ข้อมูลผลิตภัณฑ์

- | 03 | ข้อควรระวังเพื่อความปลอดภัย
 - อุปกรณ์จ่ายไฟ
 - การติดตั้ง
 - การทำงาน
 - อื่นๆ
- | 11 | ข้อขึ้นส่วนต่างๆ
 - มุมมองด้านหน้า/หลัง
 - ชุดติดตั้ง

วิธีการใช้งาน

- | 13 | ลำคัลย
 - วิธีเชื่อมต่อกับรีโมทคอนโทรล (pairing)
 - วิธีตั้งโหมดพิเศษต่างๆ
- | 16 | ปุ่มและหน้าจอ
- | 19 | การนำเพื่ออัตโนมัติ/ การชำระล้างด้านหลังด้วยน้ำที่ผ่านการฆ่าเชื้อ
- | 20 | การเลือกการชำระล้างที่ต้องการ
 - สำหรับการชำระล้างด้านหลัง
 - สำหรับการชำระล้างด้านหน้า
 - สำหรับฟังก์ชันเด็ก (ชำระล้าง)

การซ่อมบำรุง

- | 23 | การติดตั้ง
 - ถอดฝาครอบชักโครกเดิมออก
 - ติดตั้งผลิตภัณฑ์
 - ติดตั้งรีโมทคอนโทรล
 - ข้อควรระวังในการวางรีโมทคอนโทรล
- | 28 | การทำความสะอาด
 - ทำความสะอาดหัวฉีด
 - ทำความสะอาดตัวผลิตภัณฑ์
 - การถอดผลิตภัณฑ์ออก
- | 31 | การดูแลรักษา
- | 32 | การเปลี่ยนไส้กรอง

อื่นๆ

- | 33 | การแก้ไขปัญหา
- | 35 | ข้อมูลจำเพาะผลิตภัณฑ์

ข้อควรระวังเพื่อความปลอดภัย

โปรดปฏิบัติตามคำแนะนำต่อไปนี้ เพื่อความปลอดภัยของท่าน

โปรดอ่านข้อมูลนี้ เพื่อความปลอดภัยของท่าน และเพื่อป้องกันความเสียหายกับทรัพย์สินของท่าน โปรดอ่านข้อควรระวังนี้โดยละเอียด และใช้งานผลิตภัณฑ์อย่างถูกต้อง

- ⚠ **อันตราย** : อาจเกิดการบาดเจ็บสาหัสหรือเสียชีวิตได้หากละเลย
- ⚠ **คำเตือน** : อาจเกิดการบาดเจ็บสาหัสหรือทรัพย์สินเสียหายได้หากละเลย
- ⚠ **ข้อควรระวัง** : อาจเกิดการบาดเจ็บเล็กน้อยหรือทรัพย์สินเสียหายได้หากละเลย

อุปกรณ์จ่ายไฟ

- ⚠ **อย่าใช้ปลั๊กที่ชำรุด หรือใช้เต้ารับที่ชำรุด**
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠ **อย่าเคลื่อนย้ายผลิตภัณฑ์โดยการดึงที่สายไฟ**
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠ **อย่าพันสายไฟอย่างรุนแรง หรือวางของหนักทับสายไฟ เพื่อป้องกันมิให้เกิดความเสียหายหรือบิดเบี้ยว**
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠ **หากมีน้ำเข้าไปในปลั๊กไฟ ให้ถอดปลั๊ก และใช้งานหลังจากแห้งสนิทแล้วเท่านั้น**
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠ **เช็ดฝุ่นหรือน้ำที่เกาะอยู่กับขาปลั๊ก**
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠ **ต้องต่อปลั๊กไฟเข้ากับเต้ารับ 220V~, 50 Hz เท่านั้น**
การไม่ปฏิบัติตาม อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ อย่าจับปลั๊กไฟในขณะที่มือเปียก

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ อย่าเสียบและถอดปลั๊กซ้ำๆ กัน

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ ถอดปลั๊กของผลิตภัณฑ์ออกก่อนทำการซ่อมแซม ตรวจสอบ หรือเปลี่ยนอะไหล่

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ ควรใช้เต้ารับเดียว และไม่ควรรีบบปลั๊กพ่วงที่ใช้ร่วมกับเครื่องใช้ไฟฟ้าอื่นๆ

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ ถอดปลั๊กของผลิตภัณฑ์หากจะไม่ใช้งานเป็นเวลานาน

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ หากสายไฟชำรุด อย่าเปลี่ยนสายไฟด้วยตนเอง โปรดติดต่อฝ่ายบริการของ Coway เพื่อเปลี่ยนอะไหล่

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ หากสายไฟชำรุด อย่าเปลี่ยนสายไฟด้วยตนเอง

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

การติดตั้ง

⚠ อย่าติดตั้งไว้ใกล้กับเครื่องทำความร้อนไฟฟ้า

การไม่ปฏิบัติตามอาจทำให้เกิดเพลิงไหม้

⚠ อย่าใช้หรือเก็บก๊าซหรือวัตถุไวไฟไว้ใกล้กับผลิตภัณฑ์นี้

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

⚠ อย่าติดตั้งไว้ในบริเวณที่ได้รับความชื้น ฝุ่น หรือวางไว้ในจุดที่น้ำอาจกระเด็นใส่ผลิตภัณฑ์ได้

การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้

ข้อควรระวังเพื่อความปลอดภัย

- ⚠️ **อันตราย** : อาจเกิดการบาดเจ็บสาหัสหรือเสียชีวิตได้หากละเลย
- ⚠️ **คำเตือน** : อาจเกิดการบาดเจ็บสาหัสหรือทรัพย์สินเสียหายได้หากละเลย
- ⚠️ **ข้อควรระวัง** : อาจเกิดการบาดเจ็บเล็กน้อยหรือทรัพย์สินเสียหายได้หาก
ละเลย
- ⚠️ **ใช้น้ำประปาเป็นน้ำจ่ายเข้า**
การใช้น้ำอุตสาหกรรมหรือน้ำทิ้ง อาจทำให้ผิวหนังเสียหายหรือเกิดโรคผิวหนัง
- ⚠️ **อย่าต่อน้ำเข้าไปที่ท่อน้ำร้อน**
อาจทำให้เกิดการทำงานผิดพลาดหรืออุบัติเหตุได้ ตรวจสอบให้แน่ใจว่า ได้ต่อท่อน้ำเย็นเข้ากับผลิตภัณฑ์
- ⚠️ **อย่าใช้ผลิตภัณฑ์ในจุดที่รับแสงแดดโดยตรง**
อาจทำให้สีผิดเพี้ยนได้
- ⚠️ **หลังจากทำการติดตั้ง ให้ตรวจสอบข้อต่อน้ำทั้งหมด เพื่อดูว่ามีการรั่วไหลหรือไม่**
ต้องใส่แหวนยางที่ข้อต่อสามทางทุกจุด

การทำงาน

- ⚠️ หากมีเสียงผิดปกติจากผลิตภัณฑ์ กลิ่นไหม้ หรือมีควัน ให้ถอดปลั๊กทันที และติดต่อศูนย์บริการ Coway
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠️ **อย่าวางเครื่องทำความร้อนไฟฟ้าไว้ใกล้กับผลิตภัณฑ์ หรือทิ้งวัสดุติดไฟเช่นบุหรี่ลงในชักโครก**
อาจทำให้ผลิตภัณฑ์บิดเบี้ยว หรือเกิดเพลิงไหม้ได้

- ⚠️ อย่าใช้ผลิตภัณฑ์ในจุดที่มีความชื้นสูง และอย่าเสาดน้ำลงบนผลิตภัณฑ์
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠️ อย่ากั้นช่องระบายลมร้อนด้วยมือของท่าน
อาจทำให้เกิดแผลไหม้ หรือเกิดเพลิงไหม้ได้
- ⚠️ อย่าสอดลวดหรือวัตถุมีคมเข้าไปในรอยต่อของผลิตภัณฑ์ หรือช่องระบายลมร้อน
อาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือผลิตภัณฑ์เสียหายได้
- ⚠️ อย่าวางภาชนะที่มีน้ำ ยา อาหาร วัตถุโลหะ หรือวัตถุไวไฟบนผลิตภัณฑ์นี้
การสอดวัตถุแปลกปลอมใดๆ เข้าไปในผลิตภัณฑ์นี้ อาจทำให้เกิด ไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠️ อย่าใช้งานผลิตภัณฑ์หากผลิตภัณฑ์ทำงานผิดปกติ
 - * ถอดปลั๊กของผลิตภัณฑ์ทันทีที่ ปิดวาล์วจ่ายน้ำหลัก แล้วติดต่อศูนย์บริการ Coway การไม่ปฏิบัติตาม อาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
- ⚠️ ปิดวาล์วจ่ายน้ำหลักก่อนเปลี่ยนไส้กรอง
 - การไม่ปฏิบัติตาม อาจทำให้เกิดไฟฟ้าช็อตหรือผลิตภัณฑ์เสียหาย
- ⚠️ สำหรับเด็ก คนชรา หรือผู้ที่ไม่สามารถปรับอุณหภูมิด้วยตนเองหรือมีผิวบอบบาง ให้ตั้งอุณหภูมิน้ำและฝารองนั่งไปที่ “L” หรือ “Off” ตามลำดับ และอย่าใช้งานผลิตภัณฑ์ติดต่อกันนานเกิน 30 นาที การไม่ปฏิบัติตาม อาจทำให้เกิดแผลไหม้จากอุณหภูมิต่ำ
 - * แผลไหม้จากอุณหภูมิต่ำหมายถึง แผลที่เกิดจากการที่ผิวหนังสัมผัสกับความร้อน 40 °C เป็นเวลานาน
 - * หากอุณหภูมิของฝารองนั่งสูงติดต่อกันนานกว่า 45 นาที ผลิตภัณฑ์จะปรับเป็นอุณหภูมิต่ำโดยอัตโนมัติ
- ⚠️ อย่ายืนหรือวางของหนักบนฝาชักโครก
อาจทำให้ผลิตภัณฑ์เสียหายหรือทำงานผิดพลาด

ข้อควรระวังเพื่อความปลอดภัย

⚠️ **อันตราย :** อาจเกิดการบาดเจ็บสาหัสหรือเสียชีวิตได้หากละเลย

⚠️ **คำเตือน :** อาจเกิดการบาดเจ็บสาหัสหรือทรัพย์สินเสียหายได้หากละเลย

⚠️ **ข้อควรระวัง :** อาจเกิดการบาดเจ็บเล็กน้อยหรือทรัพย์สินเสียหายได้หาก
ละเลย

⚠️ ควรใช้ชุดท่อใหม่ที่มาพร้อมกับเครื่องใช้ไฟฟ้านี้ และไม่ควรนำชุดท่อเก่ากลับมาใช้ใหม่

⚠️ อย่าเปิดหรือปิดฝาชักโครกอย่างรุนแรงหรือยื่นฟิงเกอร์

อาจทำให้เกิดอันตรายหรือทำงานผิดพลาด

* ฝาชักโครกนี้ใช้ “เทคโนโลยีเปิดนุ่มนวล” เพื่อการเปิดและปิดอย่างช้าๆ

⚠️ ระวังอย่าให้บัสสาวะมาสัมผัสกับ หัวฉีด ช่องระบายลมร้อน หรือส่วนใดของพื้นผิว

การไม่ปฏิบัติตามอาจทำให้เกิดกลิ่นไม่พึงประสงค์หรือการทำงานผิดพลาด

⚠️ หากจะไม่ใช่ผลิตภัณฑ์เป็นเวลานาน ให้ถอดปลั๊ก วาล์วจ่ายน้ำหลัก และระบายน้ำในถังน้ำออก
(รายละเอียดเพิ่มเติมในหน้า 29)

⚠️ ผลกระทบที่ร้ายสายนี้อาจเกิดคลื่นไฟฟ้ารบกวน

สถานการณ์ต่อไปนี้ อาจทำให้การสื่อสารระดับชั่วคราว (การรับส่งสัญญาณ) หรือการรับ
สัญญาณขัดข้อง เนื่องจากมีสัญญาณรบกวนระหว่างรีโมทคอนโทรลและเครื่องใช้ไฟฟ้าอื่นๆ

- หากระยะทางการรับสัญญาณห่างเกินไป (ระยะทางตรง 10 ม. ระหว่างรีโมทคอนโทรลและรีโมทคอนโทรลโดยไม่มีสิ่งกีดขวาง)

- หากแบตเตอรี่ของรีโมทคอนโทรลมีพลังงานเหลือน้อย

- หากมีสิ่งกีดขวางรอบๆ รีโมทคอนโทรลที่บังคับสัญญาณ

- หากบริเวณพื้นที่ของผลิตภัณฑ์เย็นมาก

- หากผลิตภัณฑ์อยู่ใกล้กับสถานีตำรวจ สถานีราชการ สถานีกระจายเสียง ค่ายทหาร เสาร์
ส่งสัญญาณ สนามบิน หรือท่าเรือ
- หากมีการใช้รีโมทคอนโทรลของปีเตอร์อื่นที่อยู่ใกล้กัน หากรีโมทคอนโทรลมี
ปัญหาให้ใช้ปุ่มด้านข้างของโลจาร์ล่างในการใช้งาน
- ติดต่อศูนย์บริการ Coway เพื่อรับการตรวจสอบหากยังคงพบปัญหาเดิมอย่างต่อเนื่อง
- * อย่าเก็บรีโมทคอนโทรลไว้กับอุปกรณ์สื่อสารอื่นๆ เช่นวิทยุสื่อสารหรือโทรศัพท์มือถือ
อาจทำให้ผลิตภัณฑ์ทำงานผิดพลาดได้ เนื่องจากมีสัญญาณรบกวน
- ควรใช้ชุดท่อใหม่ที่มาพร้อมกับเครื่องใช้ไฟฟ้านี้ และไม่ควรนำชุดท่อเก่ากลับมาใช้
ใหม่

ข้อควรระวังเพื่อความปลอดภัย

- ⚠️ **อันตราย :** อาจเกิดการบาดเจ็บสาหัสหรือเสียชีวิตได้หากละเลย
- ⚠️ **คำเตือน :** อาจเกิดการบาดเจ็บสาหัสหรือทรัพย์สินเสียหายได้หากละเลย
- ⚠️ **ข้อควรระวัง :** อาจเกิดการบาดเจ็บเล็กน้อยหรือทรัพย์สินเสียหายได้หาก
ละเลย

อื่นๆ

- ⚠️ **ก่อนที่จะอาบน้ำหรือทำความสะอาดห้องน้ำ** ให้ถอดปลั๊กออกก่อน และระวังอย่าให้น้ำหรือน้ำยาทำความสะอาดกระเด็นไปโดนผลิตภัณฑ์
การไม่ปฏิบัติตามอาจทำให้เกิดไฟฟ้าช็อตหรือเพลิงไหม้
* หากมีสิ่งแปลกปลอมเข้าไปในผลิตภัณฑ์ ให้ปิดวาล์วน้ำ และติดต่อศูนย์บริการ Coway
- ⚠️ **อย่าถอดประกอบ ช่อมแซม หรือดัดแปลงผลิตภัณฑ์ด้วยตนเอง**
อาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือผลิตภัณฑ์เสียหายได้
- ⚠️ **อย่าถอดแยกฝารองนั่งออกจากโถชำระล้าง**
อาจทำให้เกิดไฟฟ้าช็อต เพลิงไหม้ หรือผลิตภัณฑ์เสียหายได้
- ⚠️ **ถอดปลั๊กของผลิตภัณฑ์ก่อนทำความสะอาด** อย่าทำน้ำกระเซ็นใส่ผลิตภัณฑ์ อย่าใช้ทินเนอร์ น้ำมันเบนซิน หรือน้ำยาทำความสะอาดที่มีน้ำมันพิษทำความสะอาด
เพราะอาจทำให้เกิดการกัดกร่อน สีสันเพี้ยน หรือรอยขีดข่วน
* ใช้ผ้านุ่มหรือฟองน้ำทำความสะอาดผลิตภัณฑ์
- ⚠️ **อย่าดึงท่อหรือข้อต่อท่อของโถชำระล้าง อย่างรุนแรง**
อาจทำให้เกิดการรั่วไหลหรือทำงานผิดพลาด
- ⚠️ **โปรดใช้ชุดท่อที่มาพร้อมกับผลิตภัณฑ์** อย่าใช้ชุดท่อเก่า

- ⚠ อย่าให้เด็กเล่นกับผลิตภัณฑ์ เพื่อความปลอดภัย
- ⚠ เด็กควรได้รับการกำกับดูแล เพื่อให้แน่ใจว่าจะไม่เล่นกับเครื่องใช้ไฟฟ้านี้
- ⚠ ไม่ควรให้เด็กทำความสะอาดหรือทำการบำรุงรักษา โดยไม่มีการกำกับดูแล
- ⚠ หากสายไฟชำรุดเสียหาย ต้องให้ผู้ผลิต ตัวแทนของผู้ผลิต หรือบุคคลที่มีคุณสมบัติคล้ายกันเป็นผู้เปลี่ยนอะไหล่ เพื่อหลีกเลี่ยงอันตราย
- ⚠ เครื่องใช้ไฟฟ้านี้ เด็กอายุ 8 ปีขึ้นไปสามารถใช้ได้ ส่วนบุคคลที่มีความบกพร่องทางร่างกาย การรับรู้ หรือทางจิต หรือขาดความรู้และประสบการณ์ จำเป็นต้องได้รับการกำกับดูแลหรือนำคำแนะนำการใช้งานเครื่องใช้ไฟฟ้านี้ก่อนใช้งาน เพื่อความเข้าใจด้านการใช้งานอย่างปลอดภัย และอันตรายที่เกี่ยวข้อง




คำแนะนำ

ผลิตภัณฑ์นี้มีวัตถุประสงค์เพื่อการใช้งานในห้องน้ำเท่านั้น และการใช้งานตามที่ระบุไว้ในคู่มือผู้ใช้นั้น อย่าใช้ผลิตภัณฑ์เพื่อวัตถุประสงค์อื่น


ชื่อชิ้นส่วน

มุมมองด้านหน้า/หลัง

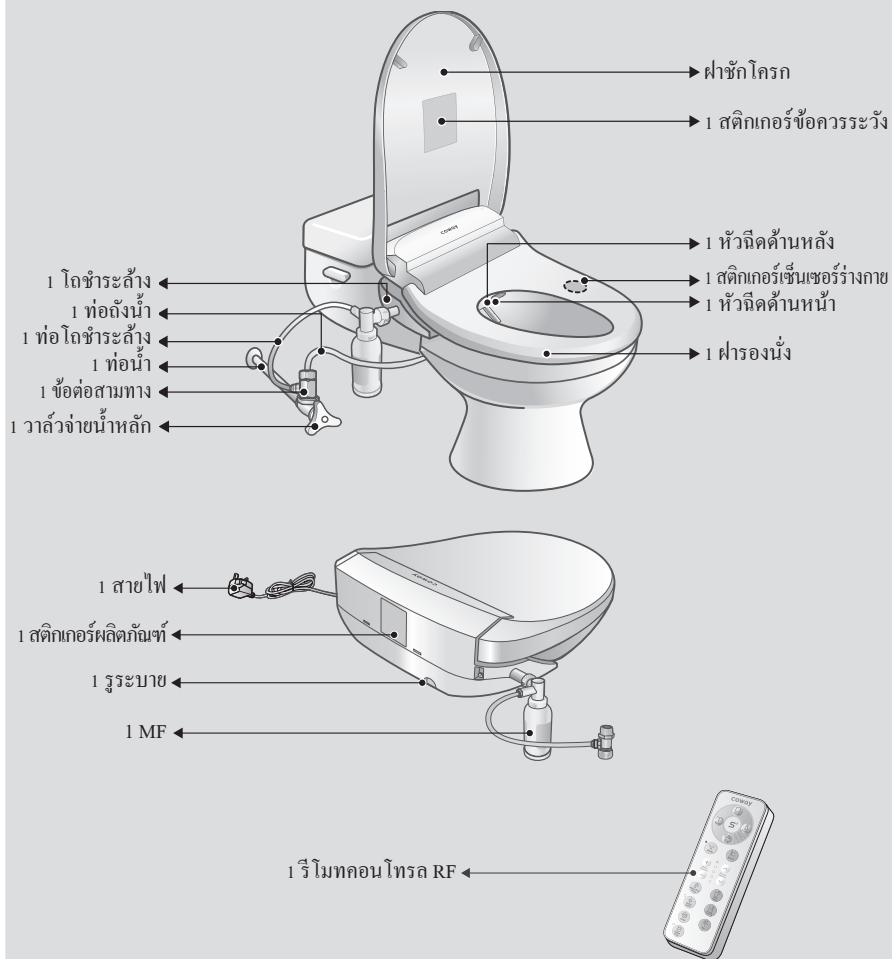

ชุดติดตั้ง


2 สกรูยึด



2 ขารองสกรู



2 แหวนยาง



2 น็อตยึด



1 ท่อโถชำระล้าง




1 คลิปหนีบฟิลเตอร์




1 อะแดปเตอร์สำหรับการติดตั้ง



1 ไม้กรอง MF



1 สต็อบเปอร์ซีดไม้กรอง



1 แผ่นเพลตสำหรับการติดตั้ง



2 แผ่นเลื่อนสำหรับซีด



1 ซิลิโคน



3 แบตเตอรี่ AAA

* ชิ้นส่วนข้างต้นนี้อาจแตกต่างกันไปโดยขึ้นอยู่กับผู้ผลิต

สำคัญ

■ เชื่อมต่อพลังงานกับผลิตภัณฑ์

เสียบปลั๊กแล้วกดปุ่มเปิด (Power) ที่แผงควบคุมเพื่อเปิดได้ ผลิตภัณฑ์นี้จะทำงานได้อย่างสมบูรณ์เมื่อเชื่อมต่อพลังงานเท่านั้น



คำแนะนำ



ผลิตภัณฑ์นี้ใช้ 220V~, 50 Hz เท่านั้น

เสียบปลั๊กเข้ากับตัวรับ 220V~, 50 Hz ที่ต่อสายดินเท่านั้น

■ เปิดวาล์วจ่ายน้ำหลัก

ผลิตภัณฑ์จะทำงานได้อย่างสมบูรณ์เมื่อจ่ายน้ำเข้าผลิตภัณฑ์เท่านั้น

หลังจากติดตั้งเสร็จแล้ว ให้แกะฟิล์มออกจากผลิตภัณฑ์และรีโมทคอนโทรลก่อนการใช้งาน

■ ตรวจสอบรีโมทคอนโทรลก่อนการใช้งาน

รีโมทคอนโทรลจะไม่ทำงานอย่างถูกต้องหากไม่ใส่ถ่านหรือไอซาร์เซลล์ปัดอยู่

หากไอซาร์เซลล์ไม่ทำงานเมื่อท่านกดปุ่มบนรีโมทคอนโทรล ให้เปิดไอซาร์เซลล์และทำการจับคู่

เมื่อแบตเตอรี่มีพลังงานต่ำและจำเป็นต้องเปลี่ยนแบตเตอรี่ ไฟ LED จะกะพริบ 3 ครั้ง ทุกครั้งที่กดปุ่ม ไฟจะหยุดกะพริบในที่สุด และรีโมทคอนโทรลจะหยุดทำงาน เนื่องจากแบตเตอรี่หมดพลังงาน

* แบตเตอรี่ไม่อยู่ภายใต้การคุ้มครองของการรับประกัน ท่านจำเป็นต้องซื้อและเปลี่ยนแบตเตอรี่แยกต่างหาก

■ ตรวจสอบ GREENPLUG ก่อนการใช้งาน

- การตั้งค่า GREENPLUG

· ทำให้สามารถควบคุมผลิตภัณฑ์ได้อย่างชาญฉลาด โดยการอ้างอิงประสิทธิภาพใช้งานของผู้ใช้ เวลาที่ใช้เป็นประจำ: อุณหภูมิของฟารองนี้จะถูกตั้งไปที่ “L”.

เวลาที่ไมใช้งาน: ในโหมดสแตนด์บาย อุณหภูมิฟารองนี้จะอยู่ที่ 23 °C

· ในโหมดสแตนด์บาย อุณหภูมิน้ำจะอยู่ที่ 20 °C (เวลาใช้งานเป็นประจำ/เวลาไม่ใช้งาน)

· เมื่อทำการนั่งลงบนฟารองนี้ อุณหภูมิน้ำและอุณหภูมิของฟารองนี้จะปรับไปที่การตั้งค่าของผู้ใช้

- การตั้งค่าโหมดประหยัดพลังงานทั่วไป

· หลังจาก 1 นาที: อุณหภูมิฟารองนี้จะปรับเป็น “L”

· หลังจาก 30 นาที: ไฟ LED ระบุพลังงานบนแผงควบคุมจะปิด และโหมดประหยัดพลังงานจะเริ่มทำงาน

■ โหมด GREENPLUG

กดปุ่ม GREENPLUG ค้างไว้จนกว่าไฟ GREENPLUG จะสว่าง และฟังก์ชันจะเริ่มทำงาน

■ หลังจากติดตั้ง

ตรวจสอบว่าไม่มีการรั่วไหลระหว่างวาล์วจ่ายน้ำหลักและท่อ

ต้องใส่แหวนยางที่ข้อต่อสามทางและวาล์วจ่ายน้ำหลัก

ใช้ฟ้านุ่มและแห้งเช็ดไอซาร์เซลล์และรีโมทคอนโทรลหลังจากอาบน้ำหรือทำความสะอาดห้องน้ำ

■ การเปลี่ยนไส้กรองเป็นประจำ

* การเปลี่ยนไส้กรองเป็นประจำนั้นสำคัญมากต่อการชำระล้างอย่างถูกสุขอนามัย หากท่านใช้ไส้กรองเก่า ประสิทธิภาพการกรองจะลดลง และอาจเจียน้ำที่ไม่ได้ผ่านการกรอง ควรเปลี่ยนไส้กรองตามระยะเวลาที่แนะนำเสมอ

* ระยะเวลาการเปลี่ยนไส้กรอง: ทุก 4 เดือน

■ การไม่ใช้งานเป็นเวลานาน

หากไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน โปรดเปลี่ยนไส้กรอง ทำความสะอาดหัวฉีด ฟารองนั่ง และผลิตภัณฑ์ด้วยวิธีการทำความสะอาดที่เหมาะสมก่อนการใช้งาน (รายละเอียดเพิ่มเติมในหน้า 27)



คำแนะนำ


ลอกฟิล์มป้องกันออกจากรีโมทคอนโทรลก่อนใช้งาน

วิธีเชื่อมต่อกับรีโมทคอนโทรล (pairing)


■ วิธีการจับคู่รีโมทคอนโทรลกับผลิตภัณฑ์

การจับคู่คือการเชื่อมต่อแบบไร้สายระหว่างอุปกรณ์ควบคุมของรีโมทคอนโทรลและไอซาร์เซลล์ ปฏิบัติตามคำแนะนำต่อไปนีในการจับคู่รีโมทคอนโทรลกับไอซาร์เซลล์

1. เสียบปลั๊กไอซาร์เซลล์จากนั้นกดปุ่มชาร์เซลล์และปุ่มทำความสะอาดหัวฉีดพร้อมกันค้างไว้ 2 วินาที จะมีเสียง “บีบ” และไฟ LED จะกะพริบ เพื่อแสดงว่ากำลังอยู่ในโหมดจับคู่

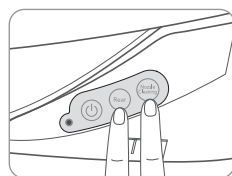


2. ภายใน 15 วินาทีหลังจากเข้าสู่โหมดจับคู่ ให้กดปุ่มชาร์เซลล์บนรีโมทคอนโทรลค้างไว้มากกว่า 5 วินาที เพื่อจับคู่กับผลิตภัณฑ์

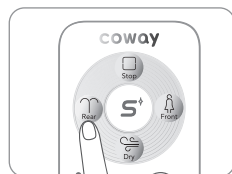

3. ไฟ LED (WIDE, อุณหภูมิน้ำอุ่น/เป่าแห้ง อุณหภูมิฟารองนัง GREENPLUG) บนรีโมทคอนโทรลจะกะพริบ 3 ครั้งเป็นสีส้ม หลังจากนั้น กระบวนการจับคู่จะเสร็จสิ้น (รอประมาณ 15 วินาที หลังจากกระบวนการจับคู่เสร็จสิ้นแล้ว)

* หลังจาก 15 วินาที ท่านจะออกจากโหมดจับคู่โดยอัตโนมัติด้วยเสียงบีบ ไม่ว่าการจับคู่จะเสร็จสิ้นหรือไม่ (ท่านต้องทำการจับคู่ให้เสร็จสิ้นภายใน 15 วินาที หรือลองอีกครั้ง)

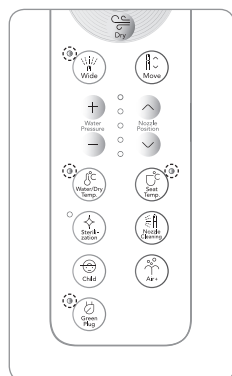


สำคัญ

วิธีตั้งโหมดพิเศษต่างๆ

กดปุ่มพลังงานและปุ่มชำระล้างบนแผงควบคุมพร้อมกันค้างไว้ 2 วินาที จะมีเสียง “บีบ” และไฟ LED จะสว่าง เพื่อระบุว่าเข้าสู่โหมดนั้นแล้ว

* ท่านจะออกจากโหมดพิเศษโดยอัตโนมัติ หากไม่มีการกระทำใดๆ 10 วินาที




1. โหมดเจียบ

กดปุ่ม Power บนแผงควบคุม จะมีเสียง “บีบ” และไฟ LED ระบุสถานะปัจจุบัน (ON : เปิดใช้งาน, OFF : ปิดใช้งาน) กดปุ่ม Power เพื่อเปิดหรือปิดโหมดเจียบ โหมดเจียบจะปิดเสียงปั๊มบนรีโมทคอนโทรลด้วยเช่นกัน

- เปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะสว่าง

- ปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะปิด

* โหมดเจียบจะปิดใช้งานมาตั้งแต่แรก

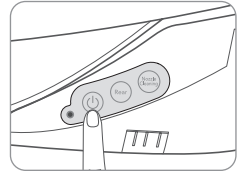


2. โหมดล๊อคเซ็นเซอร์ฟารองนั่ง

กดปุ่มชำระล้างบนแผงควบคุม จะมีเสียง “บีบ” พร้อมกับแสดงการตั้งค่าปัจจุบันด้วย LED (ON : เปิดใช้งาน, OFF : ปิดใช้งาน) กดปุ่มชำระล้างเพื่อเปิดหรือปิดโหมดล๊อคเซ็นเซอร์ฟารองนั่ง เมื่อเปิดโหมดล๊อคเซ็นเซอร์ฟารองนั่ง ฟังก์ชันชำระล้าง และฟังก์ชันเป่าแห้งจะเปิดใช้งานเมื่อเซ็นเซอร์ตรวจพบร่างกายคนเท่านั้น

- เปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะสว่าง

- ปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะปิด

* โหมดล๊อคเซ็นเซอร์ฟารองนั่งจะเปิดใช้งานมาตั้งแต่แรก

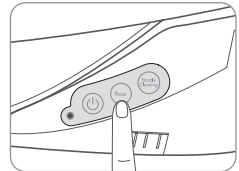


3. โหมดระบายน้ำอัตโนมัติ

กดปุ่มทำความสะอาดหัวฉีดที่แผงควบคุม แล้วจะมีเสียง “บีบ” และแสดงสถานะการตั้งค่าปัจจุบันด้วย LED (ON : เปิดใช้งาน, OFF : ปิดใช้งาน) กดปุ่มทำความสะอาดหัวฉีดเพื่อเปิดหรือปิดโหมดระบายน้ำอัตโนมัติ เมื่อเปิดโหมดระบายน้ำอัตโนมัติ น้ำในถังจะระบายโดยอัตโนมัติผ่านหัวฉีดและท่อ เพื่อสุขอนามัยของสิ่งแวดล้อม หลังจากไม่ได้ใช้ผลิตภัณฑ์นานกว่า 48 ชั่วโมง

- เปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะสว่าง

- ปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะปิด

* โหมดระบายน้ำอัตโนมัติจะปิดใช้งานมาตั้งแต่แรก

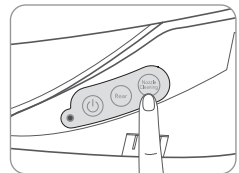


4. โหมดชำระล้างด้วยน้ำที่ผ่านการฆ่าเชื้อ

กดปุ่มทำความสะอาดหัวฉีดที่แผงควบคุมค้างไว้ 2 วินาที แล้วจะมีเสียง “บีบ” และแสดงสถานะปัจจุบันด้วยไฟ LED (ON : เปิดใช้งาน, OFF : ปิดใช้งาน) กดปุ่มทำความสะอาดหัวฉีดค้างไว้ 2 วินาที เพื่อเปิดหรือปิดใช้งานโหมดชำระล้างด้วยน้ำที่ผ่านการฆ่าเชื้อ โหมดชำระล้างด้วยน้ำที่ผ่านการฆ่าเชื้อ ใช้น้ำที่ผ่านการฆ่าเชื้อด้วยไฟฟ้า 2 วินาที ก่อนที่จะใช้กระบวนการชำระล้างตามปกติ เมื่อปิดใช้งาน จะใช้กระบวนการทำความสะอาดตามปกติเท่านั้น

- เปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะสว่าง



- ปิดใช้งาน : จอ LED บนตัวผลิตภัณฑ์จะปิด

* โหมดชำระล้างด้วยน้ำที่ผ่านการฆ่าเชื้อจะเปิดใช้งานมาตั้งแต่แรก

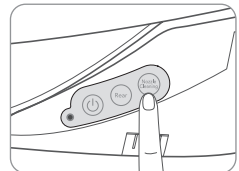

ปุ่มและหน้าจอ


ตัวผลิตภัณฑ์

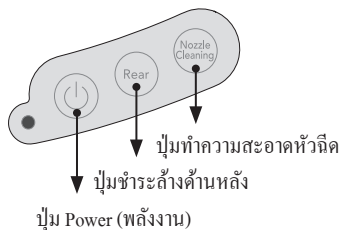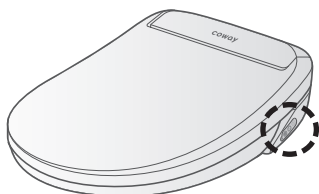

รีโมทคอนโทรล RF

● หน้าจอ ■ แผงควบคุม

- 1 ปุ่มหยุด
- 2 ปุ่มชำระล้างด้านหลัง
- 3 ปุ่มชำระล้างด้านหน้า
- 4 ปุ่มอุปกรณ์เป่าแห้ง
- 5 ปุ่มปรับ WIDE (กว้าง)
- 6 ปุ่มฟังก์ชัน MOVE (เคลื่อนย้าย)
- 7 ปุ่มปรับแรงดันน้ำ
- 8 ปุ่มปรับหัวฉีด
- 9 ปุ่มปรับน้ำชำระล้าง / อุณหภูมิการเป่าแห้ง
- 10 ปุ่มปรับอุณหภูมิผารองนั่ง
- 11 ปุ่มฆ่าเชื้อ
- 12 ปุ่มทำความสะอาดหัวฉีด / ฟังก์ชันการทำความสะอาด
- 13 ปุ่มฟังก์ชันเด็ก
- 14 ปุ่มฟังก์ชัน AIR+
- 15 ปุ่ม GREENPLUG

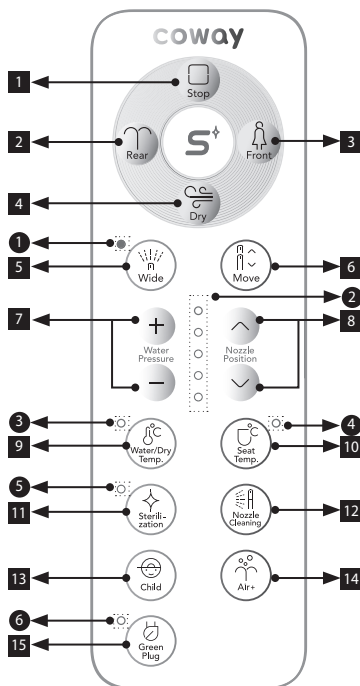

- 1 ตัวบ่งบอกฟังก์ชัน WIDE
- 2 ตัวบ่งบอกระดับแรงดันน้ำ/ตำแหน่งหัวฉีด
- 3 ตัวบ่งบอกอุณหภูมิน้ำที่ใช้ชำระล้างและอุณหภูมิลมเป่าแห้ง
- 4 ตัวบ่งบอกการปรับอุณหภูมิผารองนั่ง
- 5 ตัวบ่งบอกฟังก์ชันฆ่าเชื้อ
- 6 ตัวบ่งบอกฟังก์ชันGREENPLUG

ปุ่มและหน้าจอ

หน้าจอ



- 1** ตัวบ่งบอกฟังก์ชัน WIDE
เมื่อกดปุ่ม WIDE ไฟ LED จะเปลี่ยนเป็น
ระดับต่อไปนี้ : 1 (เขียว) → 2 (แดง) → ปิด



- 2** ตัวบ่งบอกระดับแรงดันน้ำ / ตำแหน่งหัวฉีด
กดปุ่มแรงดันน้ำเพื่อปรับแรงดันจากระดับ 1 ถึง 5
* เมื่อกดปุ่ม Move ของหัวฉีด ไฟ LED จะเปลี่ยน
ตามตำแหน่งหัวฉีด



- 3** ตัวบ่งบอกอุณหภูมิที่ใช้น้ำชำระล้างและอุณหภูมิลมเป่าแห้ง
ไฟระบุตามลำดับ :
ต่ำ (เขียว) → กลาง (ส้ม) → สูง (แดง) → ปิด
* ในขณะที่เปิดโหมดชำระล้าง/ไอชำระล้าง ตัวบ่ง
บอกจะแสดงการปรับอุณหภูมิน้ำอุ่น ในขณะที่เปิด
โหมดเป่าแห้ง ตัวบ่งบอกจะแสดงการปรับอุณหภูมิ
การเป่าแห้ง



- 4** ตัวบ่งบอกการปรับอุณหภูมิฟารองนั่ง
กดปุ่มปรับอุณหภูมิฟารองนั่ง ไฟ LED จะเปลี่ยนตาม
อุณหภูมิของฟารองนั่ง : ต่ำ (เขียว) → กลาง (ส้ม)
→ สูง (แดง) → ปิด



- 5** ตัวบ่งบอกฟังก์ชันฆ่าเชื้อ
ตัวบ่งบอกจะสว่างขึ้นเมื่อเปิดใช้งานฟังก์ชันฆ่าเชื้อ



- 6** ตัวบ่งบอกฟังก์ชัน GREENPLUG
LED จะเปลี่ยนแปลงตามการตั้งค่าของโหมด :
GREENPLUG (เขียว) → โหมดประหยัดพลังงาน
ทั่วไป (ส้ม) → โหมดไม่ประหยัดพลังงาน (ปิด)

แผงควบคุม



- 1** ปุ่มหยุด
หยุดฟังก์ชันทั้งหมดที่กำลังทำงาน



- 2** ปุ่มชำระล้างด้านหลัง
กดปุ่มนี้เพื่อเปิดฟังก์ชันชำระล้างด้านหลัง



- 3** ปุ่มชำระล้างด้านหน้า
กดปุ่มฟังก์ชันชำระล้างสำหรับสภาพสตรี



- 4** ปุ่มอุปกรณ์เป่าแห้ง
กดปุ่มนี้เพื่อใช้ฟังก์ชันเป่าแห้ง
ฟังก์ชันนี้ช่วยเป่าความชื้นส่วนเกินให้แห้ง
หลังจากใช้ฟังก์ชันชำระล้างด้านหน้า/หลัง



- 5** ปุ่มปรับ WIDE (กว้าง)
ฟังก์ชันปรับความกว้าง (WIDE)
ใช้สำหรับชำระล้างบริเวณที่กว้างขึ้น
กดปุ่มนี้เพื่อปรับระยะของการฉีดน้ำในขณะที่ใช้
ฟังก์ชันชำระล้างด้านหน้า/หลัง กดปุ่ม
WIDE เพื่อปรับระดับ : 1 (เขียว) → 2 (แดง) → ปิด



- 6** ปุ่มฟังก์ชัน MOVE (เคลื่อนย้าย)
กดปุ่มนี้เพื่อใช้ฟังก์ชันเคลื่อนย้าย เมื่อเลือกใช้การ
ชำระล้าง/ไอชำระล้าง หัวฉีดจะเคลื่อนย้ายที่หน้าหลัง
เพื่อชำระล้างบริเวณที่กว้างขึ้น



- 7 ปุ่มปรับแรงดันน้ำ**
สามารถปรับแรงดันน้ำได้ 5 ระดับ ด้วยบ่งบอกระดับน้ำที่เลือก จะสว่างขึ้นทุกครั้งทีกดปุ่มนี้



- 8 ปุ่มปรับหัวฉีด**
กดปุ่มนี้เพื่อเคลื่อนย้ายหัวฉีดไปหน้าและหลัง ในขณะที่กำลังใช้ฟังก์ชันชำระล้าง/ไอชำระล้าง สามารถตำแหน่งหัวฉีดได้ 5 ระดับ



- 9 ปุ่มปรับน้ำชำระล้าง / อุณหภูมิการเป่าแห้ง**
กดปุ่มนี้เพื่อควบคุมอุณหภูมิน้ำอุ่น/การเป่าแห้ง เมื่อกดปุ่ม ปรับอุณหภูมิน้ำอุ่น/การเป่าแห้ง ไฟ LED จะเปลี่ยนไปตาม ระดับต่อไปนี้: ต่ำ (เขียว) → กลาง (ส้ม) → สูง (แดง) → ปิด
* ในขณะที่อยู่ในสภาวะสแตนด์บาย หรือเมื่อปิดใช้ระบบฟังก์ชันชำระล้าง ด้านหน้าหลัง ด้วยบ่งบอจะแสดงการปรับอุณหภูมิน้ำอุ่น ในขณะที่ปิด ฟังก์ชันเป่าแห้ง ด้วยบ่งบอจะแสดงการปรับอุณหภูมิการเป่าแห้ง



- 10 ปุ่มปรับอุณหภูมิฟารองนั่ง**
กดปุ่มนี้เพื่อปรับอุณหภูมิฟารองนั่ง เมื่อกดปุ่มปรับ อุณหภูมิฟารองนั่ง ไฟ LED จะเปลี่ยนตามอุณหภูมิของ ฟารองนั่ง :
ต่ำ (เขียว) → กลาง (ส้ม) → สูง (แดง) → ปิด



- 11 ปุ่มฆ่าเชื้อ**
กดปุ่มนี้เพื่อเปิดฟังก์ชันฆ่าเชื้ออัตโนมัติ ไฟ Led จะเปลี่ยนระหว่างสองระดับ: การฆ่าเชื้อต่อ (20 วินาที) → การฆ่าเชื้อหัวฉีด 2 (15 วินาที)
* การฆ่าเชื้ออัตโนมัติ: จากประมาณการว่าใช้งานไอชำระล้าง 12 ครั้งต่อวัน จะมีการฆ่าเชื้ออัตโนมัติ 1 ครั้ง
* การฆ่าเชื้อด้วยตนเอง: แนะนำให้ใช้งานวันละสองครั้ง
* การฆ่าเชื้ออัตโนมัติระดับ 2 จะเปิดใช้งานเมื่อเซ็นเซอร์ฟารองนั่งตรวจไม่พบร่างกายคน
* ฟังก์ชันฆ่าเชื้อด้วยตนเองจะไม่เปิดใช้งานในขณะที่กำลังเปิดใช้ฟังก์ชันชำระล้าง/ไอชำระล้าง/เด็กเป่าแห้ง หากกดปุ่มนี้อีกครั้งในขณะที่ฟังก์ชันฆ่าเชื้อกำลังทำงาน จะมีเสียง "บีบ" และการฆ่าเชื้อจะหยุดลง



- 12 ปุ่มทำความสะอาดหัวฉีด/ ฟังก์ชันการทำความสะอาด**
การชำระล้างหัวฉีด: เมื่อกดปุ่มนี้ในขณะที่ ผลักก้นขาเปิดอยู่ จะทำความสะอาดหัวฉีด 10 วินาที การทำความสะอาดหัวฉีด: เมื่อกดปุ่มนี้ในขณะที่ ผลักก้นขาเปิดอยู่ หัวฉีดชำระล้าง/ไอชำระล้างจะขึ้น ออกมาตามลำดับ แล้วทำความสะอาดตัวเอง 3 นาที



- 13 ปุ่มฟังก์ชันเด็ก**
ฟังก์ชันนี้ได้ออกแบบมาเป็นพิเศษสำหรับเด็ก ซึ่งมีผิวที่บอบบางมากกว่าผู้ใหญ่ เมื่อกดปุ่มนี้ จะชำระล้าง 1 นาที และเป่าแห้ง 2 นาที หัวฉีดจะปรับตำแหน่งตามขนาดของ ผู้ใช้ และจะใช้แรงดันน้ำต่ำ
* ฟังก์ชันเด็กทำงาน ไม่ว่าเซ็นเซอร์ฟารองนั่งจะตรวจจพบ ร่างกายคน ได้หรือไม่ก็ตาม
* สามารถปรับฟังก์ชันเคลื่อนย้าย แรงดันน้ำ อุณหภูมิฟารองนั่ง และอุณหภูมิน้ำอุ่น/เป่าแห้งได้ในขณะที่ใช้ฟังก์ชันเด็ก กดปุ่มฟังก์ชัน เด็กอีกครั้งในขณะที่ใช้งานฟังก์ชันชำระล้างหรือเป่าแห้งเพื่อชำระล้างหรือเป่าแห้งเพิ่มเติม



- 14 ปุ่ม AIR⁺**
ฟังก์ชัน Air⁺ จะผสมอากาศเข้าในน้ำเพื่อเพิ่มประสิทธิภาพ ในการชำระล้าง
กดปุ่ม A+ เพื่อการชำระล้างที่มีประสิทธิภาพสูงขึ้น



- 15 ปุ่ม GREENPLUG**
กดปุ่มนี้เพื่อเปิดโหมด GREENPLUG
โหมดไม่ประหยัดพลังงาน ↔ โหมด GREENPLUG
- กดปุ่ม GREENPLUG บนรีโมทคอนโทรลค้างไว้ 2 วินาที แล้วจะมีเสียง "บีบ" และไฟ LED สีเขียวของฟังก์ชัน GREENPLUG จะสว่างขึ้น (GREENPLUG) โหมด GREENPLUG ↔ โหมดประหยัดพลังงานทั่วไป
- กดปุ่ม GREENPLUG บนรีโมทคอนโทรลค้างไว้ 2 วินาที แล้วจะมีเสียง "บีบ" และไฟ LED สีส้มของฟังก์ชัน GREENPLUG จะสว่างขึ้น (โหมดประหยัดพลังงานทั่วไป)
โหมดประหยัดพลังงานทั่วไป ↔ โหมดไม่ประหยัดพลังงาน
- กดปุ่ม GREENPLUG บนรีโมทคอนโทรลค้างไว้ 2 วินาที แล้วจะมีเสียง "บีบ" และไฟ LED สีเขียวของฟังก์ชัน GREENPLUG จะดับ (โหมดไม่ประหยัดพลังงาน)
* GREENPLUG จะเปิดใช้งานมาตั้งแต่แรก

การฆ่าเชื้ออัตโนมัติ/การชำระล้างด้านหลังด้วยน้ำที่ผ่านการฆ่าเชื้อ

ระบบฆ่าเชื้ออัตโนมัติ

■ ระบบฆ่าเชื้ออัตโนมัติคืออะไร

สุขอนามัยที่ดีนั้น ได้มาจากการฆ่าเชื้อ 2 ขั้นตอน ท่อ → และหัวฉีด ซึ่งทำให้เกิดสุขอนามัยทั้งภายในและภายนอกของโถชำระล้าง


ระบบฆ่าเชื้ออัตโนมัติ 2 ขั้นตอนนี้จะทำงานวันละครั้ง (อ้างอิงจากการใช้โถชำระล้าง 12 ครั้งต่อวัน) กดปุ่มฟังก์ชันฆ่าเชื้อเพื่อใช้ฟังก์ชันฆ่าเชื้อด้วยตนเอง กระบวนการฆ่าเชื้อจะทำงาน 20 วินาทีสำหรับท่อ → 15 วินาทีสำหรับหัวฉีด (แนะนำให้ใช้ฟังก์ชันฆ่าเชื้อด้วยตนเองไม่เกินสองครั้งต่อวัน)

* น้ำที่ผ่านการฆ่าเชื้ออาจจะมีไม่ โดยขึ้นอยู่กับคุณภาพของน้ำ (เช่นหากใช้น้ำบาดาลเป็นแหล่งจ่ายน้ำ อาจจะมีน้ำที่ผ่านการฆ่าเชื้อ)




■ การฆ่าเชื้อท่ออัตโนมัติ

ฟังก์ชันนี้จะฆ่าเชื้อทางเดินของน้ำทั้งหมดภายในผลิตภัณฑ์โดยอัตโนมัติ เพื่อกำจัดเชื้อโรคได้ถึง 99.9% รวมถึงโคลอน บาซิลลัสและเอนเทอโรคอคคัส ด้วยฟังก์ชันฆ่าเชื้อท่อ ท่านไม่ต้องกังวลเกี่ยวกับเชื้อโรคในโถชำระล้างเมื่อใช้ผลิตภัณฑ์นี้

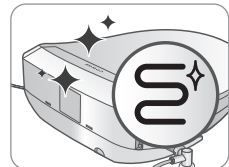

■ การฆ่าเชื้อหัวฉีดอัตโนมัติ


ฟังก์ชันนี้กำจัดเชื้อโรคได้ถึง 99.9% รวมถึงโคลอน บาซิลลัสและเอนเทอโรคอคคัส โดยการฉีดน้ำที่ผ่านการฆ่าเชิบบนหัวฉีด ซึ่งเป็นจุดที่อาจมีเชื้อโรคได้มากที่สุด หัวฉีดจะถูกฆ่าเชื้อโดยอัตโนมัติด้วยฟังก์ชันการฆ่าเชื้อ 2 ขั้นตอน และเมื่อหัวฉีดหกกลับหลังจากใช้งานฟังก์ชันชำระล้างด้านหน้า/ด้านหลัง

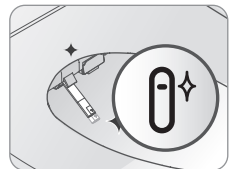

แนวคิดในการผลิตน้ำที่ผ่านการฆ่าเชิบนี้นำประปาถูกฆ่าเชื้อด้วยไฟฟ้า ซึ่งสามารถกำจัดเชื้อโรคได้ถึง 99.9% รวมถึงโคลอน บาซิลลัส และเอนเทอโรคอคคัส โดยไม่ใช้สารเคมี

การชำระล้างด้านหลังด้วยน้ำที่ผ่านการฆ่าเชื้อ

โถชำระล้างด้านหลังด้วยน้ำที่ผ่านการฆ่าเชื้อ ใช้น้ำที่ผ่านการฆ่าเชื้อด้วยไฟฟ้า 2 วินาที ก่อนที่จะใช้กระบวนการชำระล้างตามปกติ น้ำที่ผ่านการฆ่าเชิบนี้นี้ใช้การฆ่าเชื้อด้วยไฟฟ้า โดยไม่ใช้สารเคมีใดๆ ซึ่งเป็นการรับประกันความปลอดภัยและสุขอนามัย

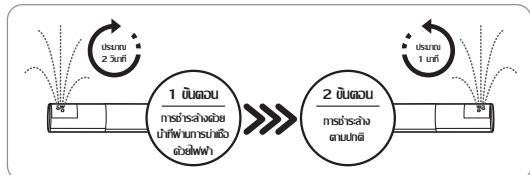

* อ่านรายละเอียดเพิ่มเติมในหน้า 15, "วิธีตั้งโหมดพิเศษ" เกี่ยวกับการปิดใช้งานฟังก์ชันฆ่าเชื้อ 2 วินาทีตอนเริ่มต้น

* หากปิดฟังก์ชันนี้ เมื่อเลือกการชำระล้างด้านหลัง การชำระล้างตามปกติจะทำงานเท่านั้น

การเลือก รูปแบบการชาร์จที่ต้องการ

สำหรับการชาร์จด้านหลัง

■ การชาร์จ


นั่งลงแล้วกดปุ่มชาร์จบนแผงควบคุม

- หัวฉีดจะระบายน้ำเย็นก่อนที่จะฉีดน้ำชำระล้าง เพื่อให้การชำระล้างเริ่มด้วยอุณหภูมิที่ต่ำไว้ก่อนหน้า
- น้ำชำระล้างจะฉีด 1 นาที แล้วหยุดโดยอัตโนมัติ
- เมื่อหัวฉีดหกกลับ หัวฉีดจะได้รับการทำงานทำความสะอาด 6 วินาที โดยอัตโนมัติ

* กดปุ่มเคลื่อนย้าย (Move) เพื่อปรับตำแหน่งของหัวฉีด

* กดปุ่มชำระล้างอีกครั้งในขณะที่ฟังก์ชันกำลังทำงานเพื่อเพิ่มระยะเวลาชำระล้างอีกหนึ่งนาที

* ท่านสามารถปรับอุณหภูมิ น้ำอุ่น แรงดันน้ำ และตำแหน่งหัวฉีดได้ตามความชอบของท่าน

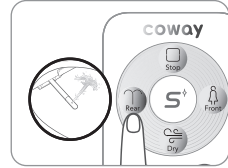

■ การเคลื่อนย้าย (Move)


นั่งลงแล้วกดปุ่มเคลื่อนย้าย (Move) บนแผงควบคุม

- หัวฉีดจะเคลื่อนที่ไปหน้าและหลังเพื่อครอบคลุมบริเวณที่กว้างขึ้น

* จะทำงานในขณะที่ใช้ฟังก์ชันชำระล้าง

* กดปุ่มย้ายที่ (Move) เพื่อปรับตำแหน่งของหัวฉีด

* กดปุ่มย้ายที่ (Move) เพื่อหยุดหัวฉีด

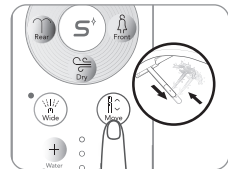

■ เป่าแห้ง (Dry)

นั่งลงแล้วกดปุ่มเป่าแห้ง (Dry) บนแผงควบคุม


- ลมอุ่นจะเป่า 2 นาที เพื่อเป่าบริเวณที่เปียกให้แห้ง

* เช็ดบริเวณที่เปียกเล็กน้อย ก่อนที่จะใช้ฟังก์ชันเป่าแห้งเพื่อให้แห้งเร็วขึ้น

* กดปุ่มอุณหภูมิ น้ำอุ่น/ลม เพื่อปรับอุณหภูมิของลม

* กดปุ่มเป่าแห้งอีกครั้งขณะใช้งานเพื่อเพิ่มเวลาเป่าแห้งอีก 2 นาที

* หากท่านกดปุ่มเป่าแห้งในขณะที่ชำระล้าง ฟังก์ชันชำระล้างจะหยุด เพื่อให้ท่านสามารถเริ่มการเป่าแห้งได้ทันที

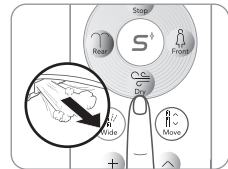


■ หยุด (Stop)

กดปุ่มนี้เพื่อหยุดฟังก์ชันทั้งหมดที่กำลังทำงาน

- หยุดฟังก์ชันทั้งหมดที่กำลังทำงาน

* ฟังก์ชันเป่าแห้งจะหยุด 2 วินาทีหลังจากกดปุ่มหยุด

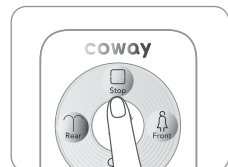

การเลือกรูปแบบการชำระล้างที่ต้องการ

สำหรับการชำระล้างด้านหน้า

■ การชำระล้างด้านหน้า


นั่งลงแล้วกดปุ่มชำระล้างด้านหน้าบนรีโมทคอนโทรล

- หัวฉีดจะระบายน้ำเย็นในหัวฉีดก่อนที่จะฉีดน้ำ เพื่อให้สามารถชำระล้างด้วยน้ำอุ่น
- น้ำชำระล้างจะฉีด 1 นาที แล้วหยุดโดยอัตโนมัติ
- เมื่อหัวฉีดไหลกลับเข้าที่ หัวฉีดจะได้รับการทำความสะอาด 6 วินาที โดยอัตโนมัติ

* กดปุ่มเคลื่อนย้าย (Move) เพื่อปรับตำแหน่งของหัวฉีด

* กดปุ่มชำระล้างด้านหน้าอีกครั้งในขณะที่ฟังก์ชันกำลังทำงาน เพื่อเพิ่มระยะเวลาชำระล้างอีกหนึ่งนาที

* ท่านสามารถปรับอุณหภูมิ น้ำอุ่น แรงดันน้ำ และตำแหน่งหัวฉีดได้ตามความชอบของท่าน

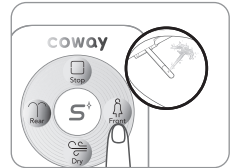

■ การเคลื่อนย้าย (Move)


นั่งลงแล้วกดปุ่มเคลื่อนย้าย (Move) บนรีโมทคอนโทรล

- หัวฉีดจะเคลื่อนที่ไปหน้าและหลังเพื่อครอบคลุมบริเวณที่กว้างขึ้น

* จะทำงานในขณะที่กำลังใช้ฟังก์ชันชำระล้าง

* กดปุ่มเคลื่อนย้าย (Move) เพื่อปรับตำแหน่ง

* กดปุ่มเคลื่อนย้าย (Move) อีกครั้งเพื่อหยุดหัวฉีด

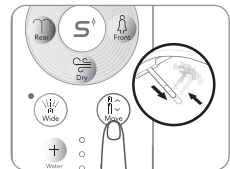

■ เป่าแห้ง (Dry)

นั่งลงแล้วกดปุ่มเป่าแห้ง (Dry) บนรีโมทคอนโทรล


- ลมอุ่นจะเป่า 2 นาที เพื่อเป่าบริเวณที่เปียกให้แห้ง

* เช็ดบริเวณที่เปียกเล็กน้อย ก่อนที่จะใช้ฟังก์ชันเป่าแห้งเพื่อทำให้แห้งเร็วขึ้น

* กดปุ่มอุณหภูมิ น้ำอุ่น/ลม เพื่อปรับอุณหภูมิของลม

* กดปุ่มเป่าแห้งอีกครั้งจะใช้งานเพื่อเพิ่มเวลาเป่าแห้งอีก 2 นาที

* หากท่านกดปุ่มเป่าแห้งในขณะที่ชำระล้าง ฟังก์ชันชำระล้างจะหยุด เพื่อให้ท่านสามารถเริ่มการเป่าแห้งได้ทันที

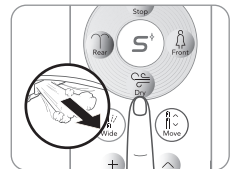


■ หยุด (Stop)

กดปุ่มนี้เพื่อหยุดฟังก์ชันทั้งหมดที่กำลังทำงาน

- หยุดฟังก์ชันทั้งหมดที่กำลังทำงาน

* ฟังก์ชันเป่าแห้งจะหยุด 2 วินาทีหลังจากกดปุ่มหยุด

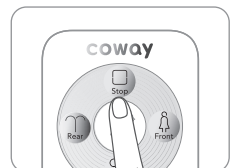


สำหรับฟังก์ชันเด็ก (ชำระล้าง)

■ ฟังก์ชันเด็ก

นั่งลงแล้วกดปุ่มเด็ก (Child) บนรีโมทคอนโทรล
จะมีเสียงบีบ และฟังก์ชันเด็กจะเปิด

- ท่านสามารถปรับแรงดันน้ำ อุณหภูมิ น้ำ ลมอุ่น และตำแหน่งหัวฉีดตามความชอบของเด็ก [แรงดันน้ำ : ระดับ 1 (ติดเบา), อุณหภูมิ น้ำ ลมอุ่น : ระดับ 2 (น้ำอุ่น), ตำแหน่งหัวฉีด : ระดับ 5 (สูงสุด), WIDE ระดับ 1 (ฉีดวงกว้างและนุ่ม)]
- น้ำชำระล้างจะฉีด 1 นาที จากนั้นจะเปลี่ยนเป็นฟังก์ชันเป่าแห้งโดยอัตโนมัติ [อุณหภูมิ การเป่าแห้ง : ระดับ 2 (ลมอุ่น)]
- หัวฉีดจะหยุดหลังจากชำระล้าง และจะทำความสะอาด 6 วินาทีโดยอัตโนมัติ

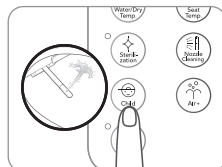

* กดปุ่มเคลื่อนย้าย (Move) เพื่อปรับตำแหน่งของหัวฉีด

* ท่านสามารถปรับอุณหภูมิ น้ำ ลมอุ่น แรงดันน้ำ และตำแหน่งหัวฉีดได้ตามความชอบของท่าน

* กดปุ่มเด็กอีกครั้งในขณะที่ฟังก์ชันกำลังทำงานเพื่อเพิ่มระยะเวลาชำระล้างอีกหนึ่งนาที

■ การเคลื่อนย้าย (Move)


นั่งลงแล้วกดปุ่มเคลื่อนย้าย (Move) บนรีโมทคอนโทรล

- หัวฉีดจะเคลื่อนที่ไปหน้าและหลังเพื่อครอบคลุมบริเวณที่กว้างขึ้น

* จะทำงานในขณะที่กำลังใช้ฟังก์ชันชำระล้าง

* กดปุ่มเคลื่อนย้าย (Move) เพื่อปรับตำแหน่งของหัวฉีด

* กดปุ่มเคลื่อนย้าย (Move) เพื่อหยุดหัวฉีด

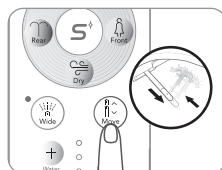

■ เป่าแห้ง (Dry)


เปิดใช้งานโดยอัตโนมัติหลังจากการชำระล้างเสร็จสิ้น

- ลมอุ่นจะเป่า 2 นาที เพื่อเป่าบริเวณที่เปียกให้แห้ง

* เช็ดบริเวณที่เปียกเล็กน้อย ก่อนที่จะใช้ฟังก์ชันเป่าแห้งเพื่อทำให้แห้งเร็วขึ้น

* กดปุ่มอุณหภูมิ น้ำ ลมอุ่น เพื่อปรับอุณหภูมิของลม

* กดปุ่มเด็กอีกครั้งขณะใช้งานเพื่อเพิ่มเวลาเป่าแห้งอีก 2 นาที

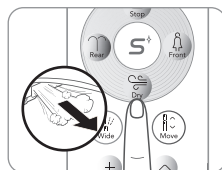

■ หยุด (Stop)

กดปุ่มนี้เพื่อหยุดฟังก์ชันทั้งหมดที่กำลังทำงาน

- หยุดฟังก์ชันทั้งหมดที่กำลังทำงาน

* ฟังก์ชันเป่าแห้งจะหยุด 2 วินาทีหลังจากกดปุ่มหยุด



การติดตั้ง

■ ติดตั้งผลิตภัณฑ์

ชั้นนี้อัดฉีดให้โถชำระล้างฉีดเข้ากับชักโครกอย่างแน่นหนา

■ พื้นที่ติดตั้ง

โถชำระล้างนี้มีวัตถุประสงค์เพื่อการใช้งานในห้องน้ำ ดังนั้นจึงควรติดตั้งในจุดที่น้ำจะไม่กระเด็นใส่โดยตรง

■ หลังการติดตั้ง

เก็บโถสวมเคมให้ห่างจากแสงแดด

■ ท่อน้ำเย็น

ตรวจสอบให้แน่ใจว่าท่อท่อน้ำเย็นเข้ากับผลิตภัณฑ์
(หากท่อเข้ากับท่อน้ำร้อน ใส่กรองและท่ออาจเสียหาย)

■ การติดตั้งรีโมทคอนโทรล

ติดตั้งรีโมทคอนโทรลที่ด้านข้างของโถชำระล้าง
กำจัดฝุ่นหรือสิ่งแปลกปลอมจากพื้นผิวก่อนที่จะติดตั้งเทปกาวยางสองหน้าสำหรับที่ใส่รีโมทคอนโทรล
ใช้ซิลิโคนเพื่อติดที่ใส่รีโมทคอนโทรล

■ การเปลี่ยนแบตเตอรี่ของรีโมทคอนโทรล

ใช้ไขควงหรือเหรียญหมุนทวนเข็มนาฬิกา สกรูจะคลาย และฝาปิดแบตเตอรี่ จะหลุดออก ถอดแบตเตอรี่เก่าออกแล้ว
เปลี่ยนใหม่ (3 X 1.5 V AAA). ปิดฝาแล้วขันสกรูตามเข็มนาฬิกา
* ใช้ความระมัดระวังในการถอดสกรู




คำแนะนำ

ปรึกษาช่างของ Coway สำหรับวิธีการติดตั้งอย่างละเอียด เพื่อให้แน่ใจว่าผลิตภัณฑ์ทำงานได้อย่าง
เต็มประสิทธิภาพ

ถอดฟารองชัโครกเดิมออก


ถอดน็อตยึดเพื่อถอดฟารองนั่งเดิม (①) และฝาชักโครกออก (②).

* เก็บฟารองนั่งและฝาชักโครกที่ถอดออกให้ห่างจากแสงแดด

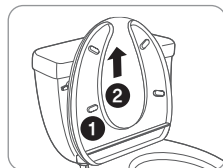

ติดตั้งผลิตภัณฑ์


1. ปิดวาล์วจ่ายน้ำหลัก (①) จากนั้นให้ถอดท่อน้ำเดิมออก (②)

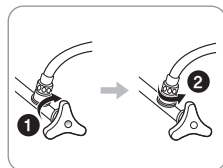

2. ใส่ขารอง แหวนยาง ข้อต่อสามทาง และท่อถึงน้ำเข้ากับท่อน้ำเดิมตามลำดับ ต่อท่อของโถชำระล้างเข้ากับข้อต่อสามทาง

* ต้องใส่แหวนยางที่ข้อต่อสามทางทุกจุด


* ชั้นน็อตที่ด้านล่างและด้านบนของข้อต่อสามทางตามเข็มนาฬิกาให้แน่นหนา

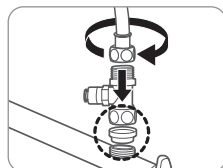

3. ยึด ใส่อุปกรณ์ MF เข้ากับสตัปเปอร์ยึด ใส่อุปกรณ์ตามทิศทางที่แสดงในภาพ


* โปรดใช้ความระมัดระวังเนื่องจากโถชำระล้างอาจจะ

ไม่ทำงานอย่างถูกต้องหากใส่อุปกรณ์หลวม

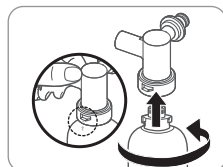


การติดตั้ง

4. ใส่แผ่นเลื่อนสำหรับขับเคลื่อนแผ่นเพลตสำหรับการติดตั้งบนชักโครก ใส่สวิตช์ และขันน็อตเพื่อยึดแผ่นเพลตสำหรับติดตั้ง

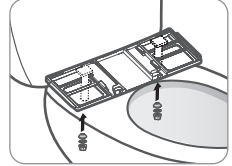

5. จัดด้านหลังของผลิตภัณฑ์ให้ตรงกับแผ่นเพลต โดยการกดปุ่ม (ใช้ส้อมมือจัดโถชำระล้าง แล้วดันจนกว่าจะคลิกเข้ากับแผ่นเพลต)


⚠ หากไม่เข้าที่อย่างแน่นหนา ให้ขันน็อตใหม่

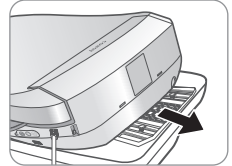

6. ใส่ไส้กรองที่ด้านหลังของโถชำระล้าง แล้วใช้ดลูปหนีบไส้กรองให้เข้าที่

⚠ ตรวจสอบว่าคลิปหนีบไส้กรองเข้าที่หรือไม่


หากไม่เข้าที่ สตอปเปอร์ยัดไส้กรองอาจหลุดออกจากผลิตภัณฑ์เมื่อท่านเปิดวาล์วจ่ายน้ำหลัก นี้อาจทำให้น้ำรั่วหรือเกิดการบาดเจ็บได้

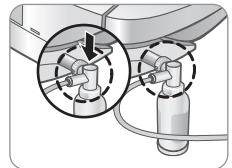


7. ต่อท่อ โถชำระล้างเข้ากับสตอปเปอร์ยัดไส้กรองและข้อต่อสามทาง

* ท่อโถชำระล้างควรจะสั้นที่สุดเท่าที่ทำได้

หากท่อยาวเกินไป อาจจะทำให้เกิดเสียงได้

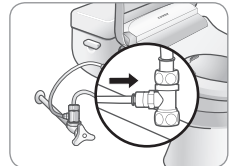

8. เปิดวาล์วจ่ายน้ำหลัก

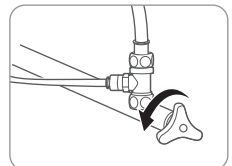


9. เสียบปลั๊กเข้ากับเต้ารับ

* ควรเสียบปลั๊กเข้ากับเต้ารับที่ต่อสายดินเท่านั้น การใช้เต้ารับที่ต่อสายดินจะลดความเสี่ยงในการเกิดไฟฟ้าลัดวงจร

⚠ เสียบปลั๊กเข้ากับเต้ารับที่ต่อสายดินและใช้เฉพาะกับผลิตภัณฑ์นี้เท่านั้น


⚠ หากไม่สามารถหลีกเลี่ยงได้ ใช้ปลั๊กฟัฟท์ที่มีกราวนด์เทอร์มินอลพิกัดอย่างน้อย 250V, 16A

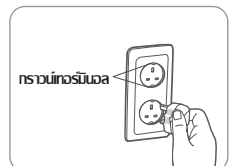

ติดตั้งรีโมทคอนโทรล

1. ทำความสะอาดพื้นผิวด้วยผ้าแห้ง แล้วติดตั้งรีโมทคอนโทรล


* ความชื้นอาจลดประสิทธิภาพการยึดติด

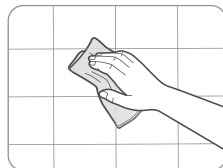


2. ทาสารกันรั่วที่ร่อง 8 ร่องด้านหลังของแบร็กเก็ตปรับได้ สารกันรั่วควรมีความหนา 2 มม.

* โปรดระวังอย่าใส่สารกันรั่วมากเกินไปจนไปสัมผัสกับเทปกาวยางสองหน้า และทำให้ประสิทธิภาพการยึดติดลดลง

* อย่าสัมผัสสารกันรั่วในการติดตั้ง หากใช้เทปกาวยางสองหน้าอย่างเดียวยังคงไม่ใช้สารกันรั่ว ที่จับอาจหล่นลง เนื่องจากประสิทธิภาพการยึดติดลดลงจากความชื้น

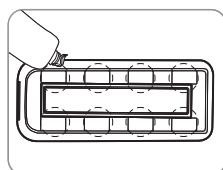

3. ลอกฟิล์มของเทปกาวยางสองหน้าที่ด้านหลังของแบร็กเก็ตปรับได้

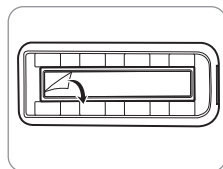

4. ติดแบร็กเก็ตปรับได้บนผนัง แล้วกดตรงกลางด้วยสองมือให้นานกว่า 10 วินาที

* แนะนำให้รอหนึ่งวันก่อนที่จะใส่รีโมทคอนโทรลในแบร็กเก็ตปรับได้ เพื่อให้เทปกาวยางสองหน้าและสารกันรั่วยึดติดอย่างแน่นหนา




การติดตั้ง

ข้อควรระวังในการวางรีโมทคอนโทรล


■ ตัวอย่างการใช้งานที่ถูกต้อง

ข้อควรระวังในการวางรีโมทคอนโทรล เพื่อป้องกันมิให้เกิด ใสรีโมทคอนโทรลในที่จับจากด้านหน้า

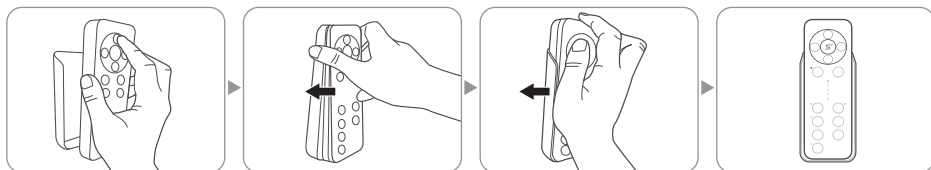

* ใสรีโมทคอนโทรลในที่จับจากด้านหน้า ตามที่แสดงในภาพ

■ ตัวอย่างการใช้งานที่ไม่ถูกต้อง

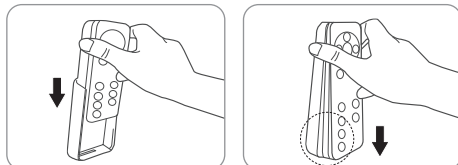


* อย่าใสรีโมทคอนโทรลในที่จับโดยการเลื่อนลง เนื่องจากอาจทำให้รีมว่งหล่นเสียหาย

การทำความสะอาด


ทำความสะอาดหัวฉีด

1. กดปุ่มพลังงาน (Power) ค้างไว้ 2 วินาที เพื่อปิดไอซ์กระถ้าง

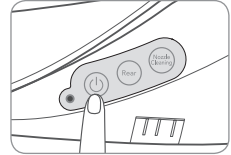


2. กดปุ่มทำความสะอาดหัวฉีดบนแผงควบคุม

- หัวฉีดไอซ์กระถ้างจะขึ้นออกมาและฉีดด้วยน้ำชำระล้าง
- กำลังทำความสะอาดหัวฉีดไอซ์กระถ้าง

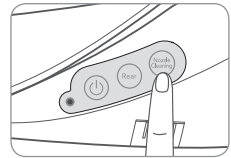


3. กดปุ่มทำความสะอาดหัวฉีดบนแผงควบคุมอีกครั้ง

- เมื่อหัวฉีดไอซ์กระถ้างถอยกลับ หัวฉีดไอซ์กระถ้างจะขึ้นออกมาและฉีดด้วยน้ำชำระล้าง
- กำลังทำความสะอาดหัวฉีดไอซ์กระถ้าง

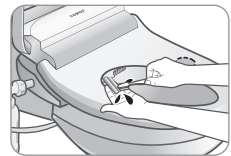

4. กดปุ่มพลังงานหรือปุ่มทำความสะอาดหัวฉีดบนแผงควบคุมอีกครั้งหลังจากทำความสะอาดหัวฉีด จากนั้นหัวฉีดไอซ์กระถ้างจะถอยกลับเข้าที่เดิม

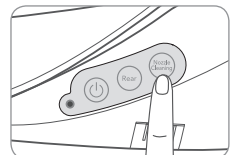

การทำตามสะดวก

ทำตามสะดวกตัวผลิตภัณฑ์

■ ใช้ผ้านุ่มหรือฟองน้ำและน้ำยาทำความสะอาดที่เป็นกลางทำความสะอาดผลิตภัณฑ์

- การไม่ปฏิบัติตามอาจทำให้ผลิตภัณฑ์บิดเบี้ยวหรือเสียหาย

⚠️ ถอดปลั๊กออกจากเต้ารับเมื่อทำการถอดหรือทำความสะอาดหัวฉีด/ท่อเป่าแห้ง

⚠️ สามารถล้างหัวฉีด/ท่อเป่าแห้งด้วยน้ำ แต่ต้องแห้งสนิทก่อนที่จะประกอบกลับคืน

⚠️ ไม่ควรใช้น้ำทำความสะอาดตัวผลิตภัณฑ์และรีโมทคอนโทรล



คำแนะนำ

⚠️ อย่าใช้ทินเนอร์ เบนซิน หรือน้ำยาทำความสะอาดที่มีตัวถูกละลาย หรือที่ขัดกับผลิตภัณฑ์นี้

⚠️ โปรดปฏิบัติตามคำแนะนำด้านบนนี้ เนื่องจากพื้นผิวของฟารองนึ่งนี้ลอกและเกิดรอยขีดข่วนได้ง่ายมาจากการใช้อุปกรณ์ขัด


⚠️ อย่าใช้ความร้อนร่วมกับหัวฉีดเพราะอาจทำให้แตกได้

⚠️ อย่าโยนหรือใช้ความร้อนร่วมกับรีโมทคอนโทรล

⚠️ อย่าทำรีโมทคอนโทรลหล่นลงน้ำหรือทำความสะอาดด้วยน้ำ


⚠️ การถอดท่อหัวฉีด

- จับปลายท่อคามที่แสดงในภาพ และแยกออกโดยการ โยกขึ้นลง
- ระวังอย่าให้ท่อหล่นลงไปในชักโครก

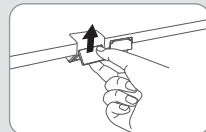


⚠️ การถอดท่อเป่าแห้ง

- ถอดท่อเป่าแห้งตามทิศทางที่แสดงในภาพ

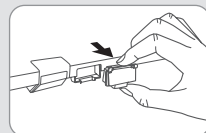


การถอดปลั๊กกันท่วม


1. ถอดปลั๊กออกจากเต้ารับ

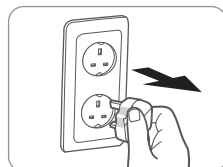


2. ปิดวาล์วจ่ายน้ำหลัก

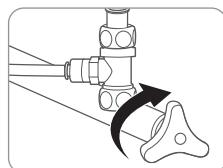


3. กดปุ่มที่ด้านล่างของผลิตภัณฑ์ค้างไว้ แล้วแยกผลิตภัณฑ์ออกโดยการจับทั้งสองข้าง แล้วดึงออกจากแผ่นเพลตสำหรับการติดตั้ง
- ถอดปลั๊กและถอดท่อของโถชำระล้างก่อนที่จะถอดผลิตภัณฑ์ออก

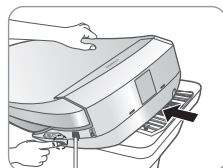

4. วางกะละมังขนาดอย่างน้อย 1 ลิ. ไว้ข้างใต้รูระบายของผลิตภัณฑ์

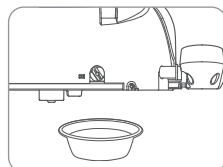

5. หมุนจุกระบายทวนเข็มนาฬิกา 90 องศา ① แล้วดึงตามทิศทาง ② เพื่อถอดออก
- เปิดระบายแล้วระบายน้ำออกจากกะละมังให้หมด

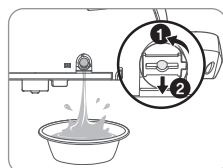

คำแนะนำ

ถอดปลั๊กของผลิตภัณฑ์ หากจะไม่ใช้งานเป็นเวลานาน

การซ่อมบำรุง

ตรวจสอบผลิตภัณฑ์เป็นประจำเพื่อความปลอดภัยในการทำงาน
ตรวจสอบสิ่งต่อไปนี้เป็นประจำเพื่อดูแลรักษาไอซ์กระด้างให้อยู่ในสภาพดี

การซ่อมบำรุง

■ พลังงาน

- เมื่อสายไฟถูกเคลื่อนย้ายในขณะที่เสียบปลั๊กอยู่ หน้าจอจะพริบเหมือนกำลังเปิดและปิดหรือไม่
- มีส่วนใดส่วนหนึ่งของสายไฟที่ร้อนกว่าปกติหรือไม่
- มีส่วนใดส่วนหนึ่งของสายไฟที่บิดเบี้ยว สึกผิพื้อน หรือเสียหายหรือไม่

 หากท่านพบปัญหาเหล่านี้ ให้หยุดใช้งานผลิตภัณฑ์ทันที แล้วติดต่อศูนย์บริการทันที


■ หน้าจอ

- เสี่ยงบ๊ีบของผลิตภัณฑ์ผิดปกติ หรือไฟสถานะกะพริบผิดปกติหรือไม่ หากเสี่ยงบ๊ีบของผลิตภัณฑ์ผิดปกติ หรือไฟสถานะกะพริบผิดปกติ โปรดติดต่อศูนย์บริการทันที


การเปลี่ยนไส้กรอง

เปลี่ยนไส้กรอง


1. ถอดปลั๊กแล้วปิดวาล์วจ่ายน้ำหลัก

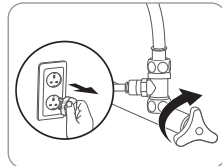


2. หมุนไส้กรองMF เพื่อถอดออกจากสตั๊ปเปอร์ซิด ไส้กรองตามทิศทางที่แสดงในภาพ

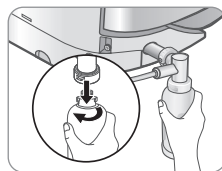

3. ใส่ ไส้กรองMF ใหม่ในสตั๊ปเปอร์ซิด ไส้กรองตามทิศทางที่แสดงในภาพ จนกว่าจะเข้าที่อย่างแน่นหนา

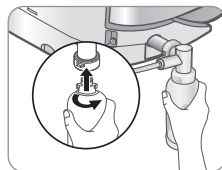

4. เปิดวาล์วจ่ายน้ำหลัก แล้วใช้งานหลังจากเสียบปลั๊ก

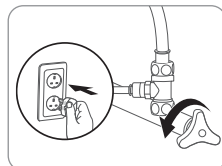

การแก้ไขปัญหา

การทำงานผิดพลาดอาจเกิดขึ้นเนื่องจากไอซาระล้างทำงาน ไม่ถูกต้องหรือสาเหตุเล็กน้อยอื่นๆแต่ไม่ได้หมายความว่าผลิตภัณฑ์นั้นเสียหาย ตรวจสอบสิ่งต่อไปนี้เพื่อแก้ไขปัญหาดังกล่าว โดยไม่ต้องขอรับบริการจากศูนย์บริการ หากท่านยังแก้ไขปัญหาไม่สำเร็จหลังจากตรวจสอบตามรายการต่อไปนี้แล้ว โปรดโทรติดต่อศูนย์บริการ

อาการ	ตรวจสอบ	วิธีแก้ปัญหที่นิยมได้
ผลิตภัณฑ์ไม่ทำงาน	• ปลั๊กหลุดหรือไม่	ให้เสียบปลั๊กเข้ากับเต้ารับ
	• ไฟดับหรือไม่	ตรวจสอบว่าไฟฟ้าดับหรือไม่
	• ผลิตภัณฑ์ปิดอยู่หรือไม่	เปิดผลิตภัณฑ์ หลังจากปิดผลิตภัณฑ์แล้ว รีโมทคอนโทรลไม่ทำงาน
	• ไฟ LED จะพริบเมื่อกดปุ่มบนรีโมทคอนโทรลหรือไม่	เมื่อแบตเตอรี่หมด ไฟ LED จะกะพริบสองครั้งเมื่อกดปุ่ม ใส่แบตเตอรี่ใหม่ในรีโมทคอนโทรล
	• ไฟ LED สว่างเมื่อกดปุ่มบนรีโมทคอนโทรลหรือไม่	รีโมทคอนโทรลจะไม่ทำงานหากแบตเตอรี่หมดมาช่วงระยะเวลาหนึ่ง ใส่แบตเตอรี่ใหม่ในรีโมทคอนโทรล
	• รีโมทคอนโทรลปิดอยู่หรือไม่	ใส่แบตเตอรี่ใหม่ในรีโมทคอนโทรล ติดต่อศูนย์บริการ Coway หากปัญหายังไม่หมดไปหลังจากเปลี่ยนแบตเตอรี่
ไม่มีน้ำออกมา	• วาล์วจ่ายน้ำหลักปิดอยู่หรือไม่	เปิดวาล์วจ่ายน้ำหลัก
	• มีสิ่งแปลกปลอมอุดตันหัวฉีดหรือไม่	ใช้แปรงสีฟันทำความสะอาดหัวฉีดเพื่อกำจัดสิ่งแปลกปลอม
	• ไม่มีน้ำไหลออกมาทันทีหลังจากกดตั้ง	ตรวจสอบว่าน้ำประปาไม่ไหลหรือไม่ (โปรดรอสักครู่ เนื่องจากต้องใช้เวลา 1-2 นาทีในการเติมน้ำให้เต็มถังหลังจากทำการติดตั้ง)
แรงดันน้ำต่ำเกินไป	• ตั้งแรงดันน้ำไประดับต่ำหรือไม่	ปรับระดับแรงดันน้ำ
	• มีสิ่งแปลกปลอมอุดตันหัวฉีดหรือไม่	ใช้แปรงสีฟันทำความสะอาดหัวฉีดเพื่อกำจัดสิ่งแปลกปลอม
	• มีสิ่งแปลกปลอมอุดตันไส้กรองหรือไม่	เปลี่ยนเปลี่ยนไส้กรอง
ฝารองนั่งและน้ำชำระล้างไม่อุ่น	• ตั้งอุณหภูมิฝารองนั่ง/น้ำไปที่ปิด “OFF” หรือไม่	กดปุ่มอุณหภูมิฝารองนั่ง/น้ำเพื่อปรับอุณหภูมิ
ที่เป่าแห้งเป่าลมเย็น	• ตั้งอุณหภูมิที่เป่าแห้งไปที่ปิด “OFF” หรือไม่	กดปุ่มอุณหภูมิการเป่าแห้งเพื่อปรับอุณหภูมิให้เหมาะสม
มีน้ำไหลออกจากส่วนอื่นที่ไม่ใช่หัวฉีด	• มีน้ำรั่วออกจากข้อต่อสามทางหรือไม่	ตรวจสอบว่าได้ใส่แหวนยางที่ข้อต่อสามทางหรือไม่ แล้วขันน็อตให้แน่นอีกครั้ง
	• มีน้ำรั่วออกจากจุดเชื่อมต่อท่อไอซาระล้าง	ดันท่อไอซาระล้างที่จุดเชื่อมต่อ
	• มีน้ำรั่วออกจากไส้กรอง	ตรวจสอบว่าไส้กรองเสียหายหรือไม่

อาการ	ตรวจสอบ	วิธีแก้ปัญหาที่ทำได้
ยังมีน้ำไหลออกมา แม้ว่า จะหยุดไอชำระ ล้างแล้วก็ตาม	• น้ำที่ไหลออกมาจากหัวฉีดหลังจากการชำระล้างคือการทำความสะอาดตัวเอง และไม่ใช้การทำงานผิดพลาด • บางครั้งหยดน้ำรอบๆ หัวฉีดอาจหยดลงไปในชักโครก หยดน้ำเหล่านี้เกิดจากการทำความสะอาดหัวฉีดหรือการนำเชื้อ และไม่ใช้การทำงานผิดพลาด	
หลังจากเสียบปลั๊ก มีเสียง บ๊องจากผลิตภัณฑ์	• เสียงนี้เกิดจากการปรับตำแหน่งหัวฉีด และไม่ใช้การทำงานผิดพลาด	
ผลิตภัณฑ์นี้ไม่ทำงาน เมื่อถังกลปุม	• ผลิตภัณฑ์นี้มีเซ็นเซอร์ฟารองนั่ง ดังนั้นฟังก์ชันจะไม่ทำงานเมื่อไม่มีคนนั่งบนฟารองนั่ง	
มีเสียงปุดๆ จากผลิตภัณฑ์	• เสียงนี้เกิดจากการทำงานของเครื่องทำน้ำอุ่น และไม่ใช้การทำงานผิดพลาด	
รีโมทคอนโทรลไม่ทำงาน	• ตรวจสอบว่าใส่แบตเตอรี่ AAA 3 ก้อนในรีโมทคอนโทรลหรือไม่ • ตรวจสอบว่าแบตเตอรี่หมดแล้วหรือไม่ หรือขั้ว +/- เสียบหายหรือไม่ • เปลี่ยนแบตเตอรี่ที่หมดพลังงานหรือเสียหาย • ตรวจสอบว่าใส่แบตเตอรี่ AAA 3 ก้อน และใส่ฝาครอบอย่างถูกต้องหรือไม่ • ตรวจสอบว่าจับคู่ผลิตภัณฑ์กับรีโมทคอนโทรลอย่างถูกต้องแล้วหรือไม่ (อ่านรายละเอียดในหน้า 10) • ตรวจสอบว่าตัวผลิตภัณฑ์เปิดหรือไม่ รีโมทคอนโทรลจะไม่ทำงานหากผลิตภัณฑ์ปิดอยู่	



คำแนะนำ

โหมด GREENPLUG จะดึงอุณหภูมิฟารองนั่งและน้ำไปที่ค่า จึงอาจทำให้เซ็นเล็กน้อยเวลานั่ง
เมื่อปิดโหมด GREENPLUG จะรักษอุณหภูมิตามที่ตั้งไว้
อ่านรายละเอียดเพิ่มเติมได้ในหน้า 9 ของคู่มือผู้ใช้ เกี่ยวกับวิธีการปิดโหมด GREENPLUG

ข้อมูลจำเพาะผลิตภัณฑ์

ชื่อผลิตภัณฑ์		ไบนาร์ลิ่งอิเล็กทรอนิกส์ Coway BAS25-ATH
รุ่น		BAS25-ATH
อัตราแรงดันไฟฟ้า		220V~, 50 Hz
การใช้พลังงาน		1,050 W
ย่านความถี่การใช้งาน		2402 MHz ถึง 2462 MHz
ประเภทการกล่าสัญญาณ		GFSK
สายไฟ		1.8 ม.
แรงดันน้ำ		0.1 MPa - 0.68 MPa
ขนาด		412 มม. (ก) X 534 มม. (ล) X 161 มม. (ส)
น้ำหนัก		4.5 กก.
อุปกรณ์ชำระล้างด้วยน้ำอุ่น	การชำระล้างด้านหลัง	ได้ถึง 0.62 ลิตร/นาที ฟังก์ชันทำความสะอาดหัวฉีดอัตโนมัติ
	การชำระล้างด้านหน้า	ได้ถึง 0.62 ลิตร/นาที ฟังก์ชันทำความสะอาดหัวฉีดอัตโนมัติ
	ระยะเวลาการทำงาน	ประมาณ 1 นาที สำหรับการชำระล้างด้านหน้า และ 1 นาทีสำหรับการชำระล้างด้านหลัง
	การควบคุมแรงดันน้ำ	การควบคุม MICOM 5 ระดับ
	การควบคุมอุณหภูมิน้ำอุ่น	4 ระดับ (ปิด : อุณหภูมิห้อง, ต่ำ : 32 °C, กลาง : 35 °C, สูง : 38 °C)
	การใช้พลังงานสูงสุดในการทำน้ำอุ่น	1,000 W
	ความจุถังน้ำ	0.6 ลิ.
อุปกรณ์เป่าลมอุ่น	อุปกรณ์ความปลอดภัย	แถบโลหะคู่ต่าง เซ็นเซอร์อุณหภูมิ พิวส์อุณหภูมิ (ป้องกันโอเวอร์ฮีต)
	การควบคุมอุณหภูมิลมอุ่น	4 ระดับ
	ระยะเวลาการทำงาน	เป่าแห้งประมาณ 2 นาที
	การใช้พลังงานของเครื่องทำความร้อน	180 W
ฝารองนั่งทำความร้อน	อุปกรณ์ความปลอดภัย	แถบโลหะคู่ต่าง พิวส์อุณหภูมิ (ป้องกันโอเวอร์ฮีต) รีเลย์
	การควบคุมอุณหภูมิฝารองนั่ง (อุณหภูมิหลังจากผู้ใช้นั่งลง)	4 ระดับ (ปิด : อุณหภูมิห้อง, ต่ำ : 31 °C, กลาง : 34 °C, สูง : 37 °C)
	การใช้พลังงานของเครื่องทำความร้อน	50 W
	อุปกรณ์ความปลอดภัย	เซ็นเซอร์อุณหภูมิ พิวส์อุณหภูมิ (ป้องกันโอเวอร์ฮีต)
MF	อายุการใช้งาน	4 เดือน (อ้างอิงจาก 2.5 ๒เดือน, ความดันต่ำกว่า 0.5 NTU)
	ขนาด	136 มม. (ความยาว) × 48 มม. (Ø)
ชิ้นส่วนสำหรับติดตั้ง		ท่อชำระล้าง (1), แขนยาง (2), สกรูยึด (2), เนื้อยึด (2), ยางรองสกรู (2), แผ่นพลาสติกสำหรับการติดตั้ง (1), Pre MF (1), สต่อปเปอร์ซิดฟิเตอร์ (1), คลิปหนีบฟิเตอร์ (1)
ฟังก์ชันอื่นๆ		การย้ายตำแหน่งหัวฉีดหน้า/หลัง เคลื่อนย้าย ทำความสะอาดหัวฉีด ฟังก์ชันฆ่าเชื้ออัตโนมัติ โหมด GREENPLUG ฟังก์ชันเด็ก
อุณหภูมิการทำงาน		0 °C - 40 °C
วีโมทคอนโทรล	ข้อมูลบริษัท	World Hi-Tech
	ผู้ผลิตประเทศแหล่งที่มา	World Hi-Tech/สาธารณรัฐเกาหลี
	ชื่อชิ้นส่วน/รุ่น	อุปกรณ์วิทยุพลังงานต่ำ (อุปกรณ์วิทยุสำหรับระบบสื่อสารไร้สาย)/BAS25-ATH-TX

► ข้อมูลจำเพาะอาจเปลี่ยนแปลงเพื่อวัตถุประสงค์ในการพัฒนาประสิทธิภาพการทำงานของผลิตภัณฑ์

บันทึก

////////////////////////////////////

บันทึก

////////////////////////////////////

บันทึก

////////////////////////////////////

coway

www.coway.com